


Pin Connections for:

Interface board for Stepper Motor Driver 3128A 40V 3A

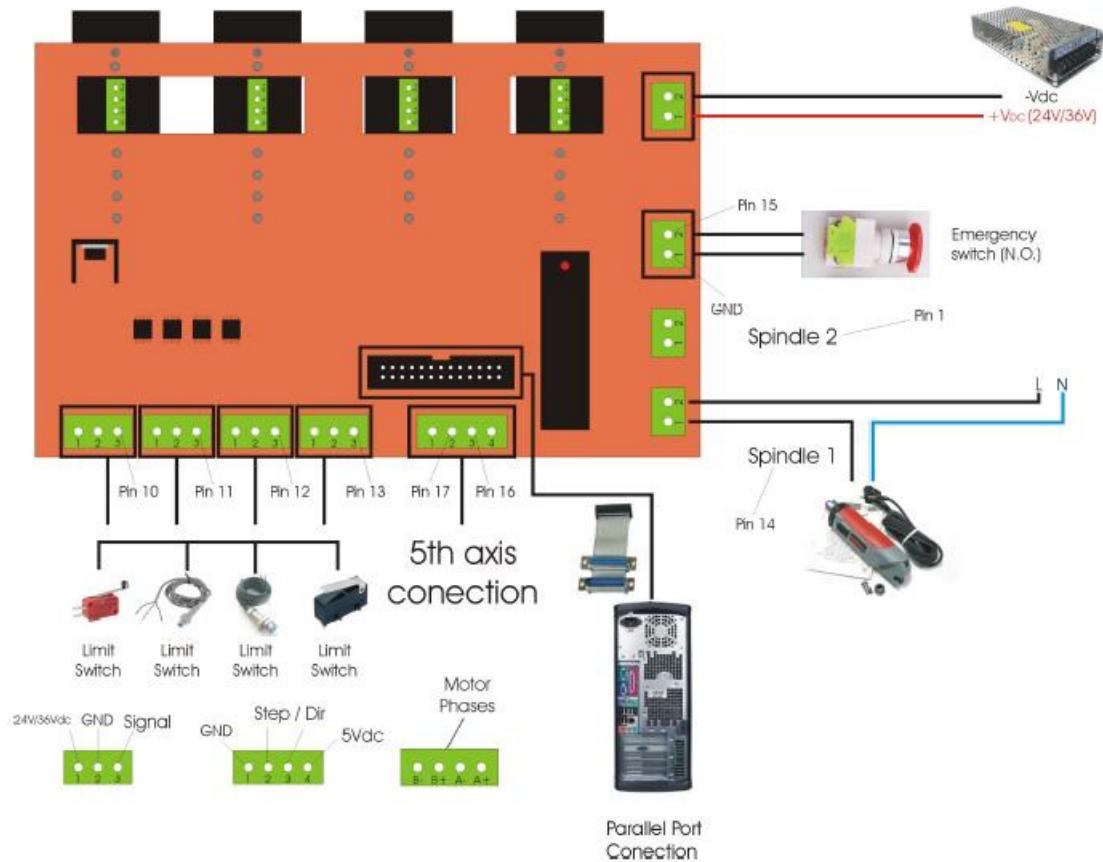

Parallel port pins for Step and Direction:

	Step	Direction
Axis X	2	3
Axis Y	5	4
Axis Z	7	6
Axis A	9	8