

SONY

TRINITRON® COLOR VIDEO MONITOR

BVM-D20F1U/D20F1E/D20F1A

BVM-D24E1WU/D24E1WE/D24E1WA

BVM-D32E1WU/D32E1WE/D32E1WA

File Name: Bvm-d24e1we manual.pdf

Size: 3366 KB

Type: PDF, ePub, eBook

Category: Book

Uploaded: 3 May 2019, 14:48 PM

Rating: 4.6/5 from 638 votes.

Download Now!

Please check the box below to proceed.

HR Trinitron

Multiformat

OPERATION MANUAL English

1st Edition (Revised 7)

Serial No. 2000001 and Higher



I'm not a robot




reCAPTCHA
Privacy - Terms

Book Descriptions:

Bvm-d24e1we manual

To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only. De batterij mag alleen vervangen worden door vakbekwaam servicepersoneel. Therefore, consideration should be given to installing the equipment in an environment compatible with the manufacture's maximum rated ambient temperature Tmra 0 C to 35 C 32 F to 95 F. If you have any questions about this unit, contact your authorized Sony dealer. On rack mounting When the monitor is mounted on a rack, the. Controlling monitor groups Up to 32 monitors can be controlled from one control unit by the RS485 serial remote connections. This mode is convenient for chroma and phase adjustment, and for monitoring VTR noise. Matrix selection The ITU601, ITU709 and SMPTE240M matrix modes can be selected for individual input signals. Up to four adaptors can be installed to the monitor. The input signal type for each connector of the adaptor is set with the INPUT CONFIGURATION menu, in accordance with the configuration of the connector. The signals that each of the adaptors'. Note Turn off the main power of the monitor and disconnect the AC power cord before installing or removing adaptors. Remove the cover of an input option slot on the rear panel of the monitor. By changing the setting in the REMOTE menu, different pins on the remote connector can be used to control the tally lamp. By setting in the SYSTEM CONFIGURATION menu, the monitor can also be set to enter standby mode when the MAIN POWER switch is turned on. Note When the monitor is turned on, "INITIALIZING" is displayed. The IN and OUT connectors form a loopthrough connection. The explanation applies to the optional BKM11R Monitor Control Unit. 1 Monitor memory card insertion slot 2 SHIFT button 3 Function buttons 4 Menu operation buttons. The operations are the same for the BKM 11R optional. MENU DOWN ENTER MANUAL The functions of the menu operation buttons are described below. The menu list is displayed on the screen. <http://asiapagesonline.com/paddyspalmspub/temp/dell-poweredge-4161ds-manual.xml>

- **bvm-d24e1we manual.**

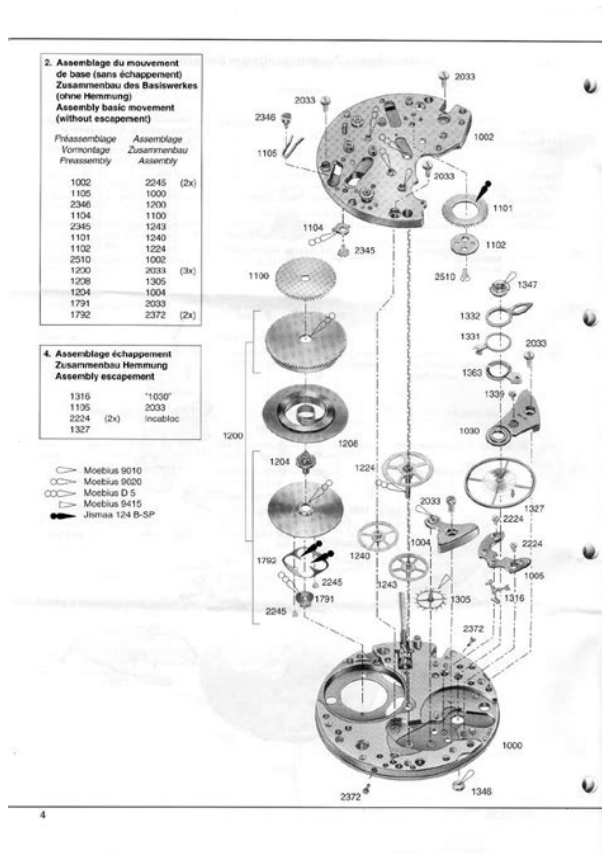


For more information about setting and adjustments, see below. The selected item is displayed in yellow text and set to setting mode. This ADDRESS menu is used to select the monitor or the monitor group by assigning the address number or group address number, so that when several monitors are connected together via serial remote ports, the control panel can select which monitor to control. The Main Menu displayed on the Menu List and Level 1 are shown below. Main Menu CONTROL PRESET ADJ A COLOR TEMP ADJ B SET UP C MEMORY CARD D COPY FROM E STATUS F KEY PROTECT G Detailed information on the levels of menus is. Preset values can be set either commonly to all channels or separately for individual channels. Except for the Sony BKM14L, a cable is required to connect the color analyzer to the monitor. Manufacturer. COL1 Copy common data factory setting D93. These numbers are not displayed on the screen. The following settings can be made with the REMOTE menu. These numbers are not displayed on the screen. These numbers are not displayed on the screen. These numbers are not displayed on the screen. ROTATION Compensates for the screen rotation which occurs when the monitor is installed facing north or south. H PHASE Adjust the horizontal picture position. V CENTER Adjust the vertical picture position. The signal format and screen size for the adjustment are displayed on the top of the screen. Choose the function to execute. RELOAD FACTORY DATA. Restore factory default data for the board installed in the selected slot. The following information is displayed on the three pages of the STATUS menu. Structure of the STATUS Menu Main Menu Level 1 STATUS F. Exiting the ADDRESS Menu To exit the ADDRESS menu, press the ADDRESS button or the MENU button. Shortcut Function in the ADDRESS Menu When selecting the monitor, shortcut function will enable to select the target monitor without using the items in the ADDRESS menu. <http://davefarrow.com/userfiles/dell-poweredge-2950-rack-rails-manual.xml>

Connection cable for GRASEBY SLS 9400 probe Connection cable for MINOLTA CA100 probe The following diagrams show specifications and pin assignments for the required cables. For you reference, each menu item is followed by the page of this manual on which the item is explained, its menu number, and the Main Menu that the item belongs to. Sony Corporation expressly prohibits the duplication of any. Serial No. 2000001 and HigherChapter 1 Overview Precautions. 3On safety On rack mounting. Page 10 Overview. The BVM Up to 32 monitors can. All three CRT cathodes. Page 12 OverviewPage 13 Connector Panel Configuration. The unit comes standard with connectors for one BKM41HD BKM42HD BKM48X1Each decoder adaptor can be installed in any input 3 Push the adaptor in until. Page 16 Location and Function of PartsChapter 1 OverviewPage 17 1 Tally lamp. With factory settings, the tally lamp lights when pins. No. 8 and No. 9 of the REMOTE. Page 18 Location and Function of PartsChapter 1 OverviewWhen turned on, the monitor enters operation mode.This manual explains the location and function of parts NotePage 23 Function buttons in SHIFT OFF mode LEDs of function buttons in greenPage 24 Location and Function of PartsChapter 1. Page 25 Aperture modification frequency for each signal formatPage 27 Installation of the 43 MaskPage 28 Basic Menu OperationsPage 29 Chapter 2 Menu Chapter 2 MenuPress the MENU button. Follow the steps described. Page 30 Basic Menu OperationsPage 31 Entering a numerical value 2 Press the ENTER or Ent button.The "" indicates the. Page 32 Basic Menu OperationsMenus consist of two to six levels. The Main Menus Detailed information on the levels of menus. Page 34 A Preset Adjustment of the Picture Level ControlSelect the setting method. white, yellow, cyan, green. Page 36 B Adjusting the Color TemperaturePage 37 Structure of the COLOR TEMP ADJ Menu. Level 1 Level 2 Level 3 Level 4 Level 5 Level 6. STD.

Page 38 B Adjusting the Color Temperature — COLOR TEMP ADJ MenuPage 40 B Adjusting the Color Temperature — COLOR TEMP ADJ MenuData pertaining to the input signals.This section explains the setting lists displayed in the CONTROL Use if. The size of the safe area for the 169xx% or 43xx% Select STD, COL1, COL2.Page 47 Setting Lists of the REMOTE MenuEnter the password for the PASSWORD menu. ENTER PASSWORD Enter the password factoryThis section explains the setting lists displayed in the DEFAULT CH Select.Page 53 Setting Lists of the ON SCREEN SET MenuAdjust the position or size of the.To perform adjustment, operate the BKM14L asThe following six functions can be executed with.The STATUS menu is used to view general data. Page 66 Selecting the Monitor to ControlTo cancel the remote control mode, press the. Page 68 SpecificationsTemperature UL1950, CSA No.950. Page 72 SpecificationsSpecial cables are required to connect color The following diagrams show specifications. Page 76 SpecificationsPage 77 Menu Index. The menu index shows the menu items provided withFor you reference,. Page 78 Menu IndexChapter 3 Appendix. Replace only with the same or equivalent type recommended by the



manufacturer. Discard used batteries according to the To prevent fire or shock hazard, do not manufacturer's instructions.ATTENTION To avoid electrical shock, do not open the Il y a un risque d'explosion si la pile est mal inseree. cabinet. Refer servicing to qualified Remplacer la pile uniquement par une pile de meme tyTherefore, kann die Umgebungstemperatur um das GestelUp BKM27T TriStandard Decoder Adaptor to four adaptors can be installed to the monitor. Includes decoders for analog composite NTSC, PNote Turn off the main power of the monitor and disconnect the AC power cord before installing or removing adaptors. 1 Remove the cover of an input option slot on the rear panel of the monitor.

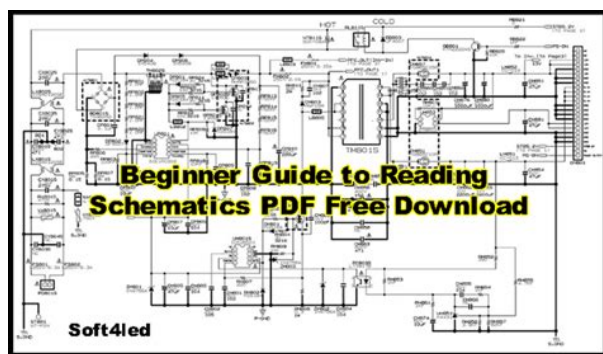

<http://www.drupalitalia.org/node/77280>

Note When installing a decoder adaptor in an input optionBy changing the setting in the REMOTE menu, different pins on the remote connector can be used to control the tally lamp. Refer servicing to qualified personnel only. If used in USA, use the UL LISTED power cord specified below.In setting mode, increases the setting and adjustment values. 1 DOWN button Moves the cursor downward. For more information about setting and adjustments, see below. To abort menu operation Press the MENU button. The menu of the upper level is displayed. The Main Menu displayed on the Menu List and Level 1 are shown below. STD Copy common data factory setting D65. COL1 Copy common data factory setting D93. These numbers are not displayed on the screen. ROTATION Compensates for the screen rotation which occurs when the monitor is installed facing north or south. Choose the function to execute. We know from our users' experience that most of people do not really attach importance to these manuals. Many instructions, immediately after the purchase, go into the trash along with the box, which is a mistake. Get acquainted with the information concerning the manual for Sony BVMD24E1WU, BVMD24E1WE, BVMD24E1WA, which will help you to avoid troubles in the future. You will then acquire basic knowledge to maintain Sony BVMD24E1WU, BVMD24E1WE, BVMD24E1WA in good operating condition to make it easily reach the intended life cycle. Then you can put away the manual on a shelf and use it again only in a situation where youre not sure whether you perform maintenance of the product appropriately. Proper maintenance is a necessary part of your satisfaction from Sony BVMD24E1WU, BVMD24E1WE, BVMD24E1WA. Once a year, clean the closet where you keep all your devices manuals and throw out the ones that you dont use. This will help you maintain order in your home base of manuals. Refer servicing to qualified personnel only.

<http://www.acquaproget.com/images/bowa-service-manual.pdf>

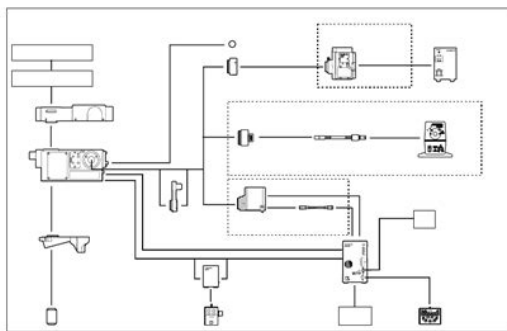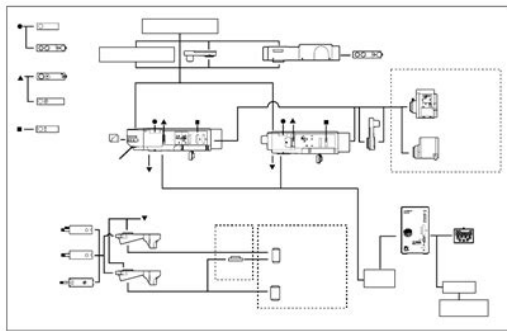

AVERTISSEMENT Afin d'éviter tout risque d'incendie ou d'électrocution, ne pas exposer cet appareil à la pluie ou à l'humidité. If used in USA, use the UL LISTED power cord specified below. Up to four adaptors can be installed to the monitor. By changing the setting in the REMOTE menu, different pins on the remote connector can be used to control the tally lamp. By setting in the SYSTEM CONFIGURATION menu, the monitor can also be set to enter standby mode when the MAIN POWER switch is turned on. Note When the monitor is turned on, "INITIALIZING" is displayed. The pin assignment and factory setting function assigned to each pin are given below. The explanation applies to the optional BKM11R Monitor Control Unit.

1 Monitor memory card insertion slot Insert the BKM12Y Monitor Memory Card optional. Push the monitor memory card in until the EJECT button comes out. In setting mode, increases the setting and adjustment values.

1 DOWN button Moves the cursor downward. In setting mode, decreases the setting and adjustment values. The setting or adjustment being performed is canceled, and data loading or saving is aborted.

Detailed information on the levels of menus is described at the top of explanation of each menu.

CH SET Copy data from a particular channel. When a channel number 1 to 90 is entered with the numeric keypad, it is then possible to set which input connector on the rear panel will be assigned to that channel number, and select the type of signal that will be connected.

V CENTER Adjust the vertical picture position. To cancel the adjustment Press the MENU button. The data copy from one monitor to another is accomplished with the COPY menu. Address number selected with the Address Shortcut function DIS PLAY. Exiting the ADDRESS Menu To exit the ADDRESS menu, press the ADDRESS button or the MENU button.

<http://frial.com/images/bow-tuning-manual.pdf>

Why is it worth reading If something bad happens while using a Sony BVMD24E1WU, BVMD24E1WE, BVMD24E1WA, you will have a set of documents that are required to obtain warranty repairs. It is in this part of the manual that you will also find information about the authorized service points of Sony BVMD24E1WU, BVMD24E1WE, BVMD24E1WA as well as how you can properly maintain the device by yourself so as not to lose the warranty for the product. Use the instructions of the Sony BVMD24E1WU, BVMD24E1WE, BVMD24E1WA manufacturer to run the product properly, without unnecessary risk of damage to the equipment. You will also be able to find out what optional parts or accessories to Sony BVMD24E1WU, BVMD24E1WE, BVMD24E1WA you will be able to find and buy to your device. This is a very useful part of the manual which will save you a lot of time related to finding a solution. 90% of the problems with a Sony BVMD24E1WU, BVMD24E1WE, BVMD24E1WA are common to many users. Read to optimally use the Sony BVMD24E1WU, BVMD24E1WE, BVMD24E1WA and not to consume more power than is necessary for the proper operation of the product. You will learn what additional features can help you use the product Sony BVMD24E1WU, BVMD24E1WE, BVMD24E1WA in a comfortable way and what functions of your device are the best to perform specific tasks. It is good to get acquainted with it to avoid disappointments resulting from a shorter exploitation time of the product Sony BVMD24E1WU, BVMD24E1WE, BVMD24E1WA than expected. However, if you cannot be convinced to collect manuals at your home, our website will provide you with help. You should find here the manuals for most of your devices, including Sony BVMD24E1WU, BVMD24E1WE, BVMD24E1WA. Be sure to check that it is the user manual to exactly the device that you are looking for. In our database Sony BVMD24E1WU, BVMD24E1WE, BVMD24E1WA it belongs to the category Computer Monitor.

A user manual Sony BVMD24E1WU, BVMD24E1WE, BVMD24E1WA is taken from the manufacturer, a Sony company it is an official document, so if you have any doubts as to its contents, please contact the manufacturer of the device Sony BVMD24E1WU, BVMD24E1WE, BVMD24E1WA directly. You can view the user manual Sony BVMD24E1WU, BVMD24E1WE, BVMD24E1WA directly online or save and store it on your computer. In this case, select If you have any questions, you can ask them in the form below. Other users viewing this website will have the opportunity to help you solve your problem with Sony BVMD24E1WU, BVMD24E1WE, BVMD24E1WA. Remember that you can also share the solution. If you solved the problem yourself, please write the solution to the problem with Sony BVMD24E1WU, BVMD24E1WE, BVMD24E1WA you will surely help many users by doing so. Ask a question our users can help you. It contains circuit diagrams schemas etc. It also usually contains parts catalog. After placing order well send You download instructions on Your email. See below for delivery information Well send You download instructions on Your email. What

is PDF How to get Adobe Reader Thomas, DL8EBD Germany Excellent Tech Information. Now Ill can repair my boombox As a result, the pedestal level of the R signal is fixed at the GND level. The same is performed for the G and B signals. 8. Half Blanking The video signal is halfblanked at the timing of the CHAR BLK signal. The halfblanking level is switched by the HALF LEVERL SW. 9. 100 IRE Pulse, SET UP Pulse Insertion Circuit To adjust the contrast, the 100 IRE pulse and SET UP pulse are alternately inserted into the horizontal blanking period of the R,G,B signals. The level of the 100 IRE pulse is set by the R100 IRE voltage. The level of the SET UP pulse is set by the R SET UP voltage. As a result, the 100 IRE pulse voltage becomes equivalent to the CONT voltage. Consequently the contrast can be adjusted by varying the CONT voltage.

<https://www.sussexweddingservices.co.uk/wp-content/plugins/formcraft/file-upload/server/content/files/1626d810a94ba2---3m-mp8030-manual.pdf>

In this IC, the voltage of the SET UP pulse is sampleheld. As a result, the pedestal level of the R signal is fixed at the GND level. At the same time, the DC bias of IC116 is controlled by the BRT voltage to perform bright adjustment. Creative Video Productions Ltd acts as a broker and offers finance from a restricted range of finance providers. Finance provided by PayPal Credit, a trading name of PayPal Europe S.a r.l. et Cie, S.C.A., 2224 Boulevard Royal L2449, Luxembourg. Multiformat Serial No. 2000001 and Higher ALL MODELS To reduce the risk of electric shock, fire or injury, do not perform any servicing other than that Refer all servicing to Alle Wartungsarbeiten dürfen nur von qualifiziertem Fachpersonal ausgeführt werden. Urn die. Gefahr eines elektrischen Schlages, Feuergefahr und Verletzungen zu vermeiden, sind bei. Wartungsarbeiten strikt die Angaben in der Anieitung zu befolgen. Andere als die angegeben. Wartungsarbeiten dürfen nur von Personen ausgeführt werden, die eine spezielle Befähigung Pour toute reparation faire appel a une personne competente uniquement. Beam Current Protector Check 42 Schematic Diagrams. BK1 1128 C, PC 24 inch model 1139 BUP24inch model 1134. C, PC 20 inch model 1138. C, PC 24 inch model 1140 PA 24 inch model 1157 Multiformat Serial No. 2000001 and Higher. This section is extracted from. Operating Instructions operation manual. To avoid eiectricai shock, do not open the AVERTiSSEMENT. Afin d'éviter tout risque d'incendie ou d'électrocution, ne pas Afin d'écarter tout risque d'électrocution, garder le coffret Feuchtigkeit ausgesetzt werden. Urn einen elektrischen Schlag zu vermeiden, dart das. Gehäuse nicht geoffnet werden. Oberlassen Sie. Wartungsarbeiten stets nur einem Fachmann. ADVERTENCiA. Para evitar incendios o el riesgo de electrocucion, no Para evitar descargas electricas, no abra la unidad. En caso Per evitare scosse elettriche, non aprite l'apparecchio.

<chingjin.com/userfiles/files/case-580k-backhoe-manual.pdf>

Per Replace only with the same or equivalent type recommended Remplacer la pile uniquement par une pile de meme type ou Es dart nur eine identische oder eine vom Hersteller Entladene Batterien sind nach den Anweisungen des. Herstellers zu entsorgen. Gamble solo por una del mismo tipo o especificaciones Las batenas viejas se deben eliminar siguiendo las Sostituirla solo con unaltra uguale o di un tipo equivalentes Gettare via le pile usate secondo Note. The socketoutlet should be installed near the equipment and Remarque. La prise dolt etre pres de l'appareil et facile d'accès. Hinweis. Zur Trennung vom Netz ist der Netzstecker aus der. Steckdose zu ziehen, welche sich in der Nahe des Gerates Nota. La toma mural debe estar instalada cerca del equipo y debe Nota. La presa di corrente deve essere situata vicino Apparat en ma kun tilkoples jordet stikkontakt. Apparat en ma kun tilkoples jordet stikkontakt Cord Type SVT, three 1 6 or 1 8 AWG wires. Rating Minimum 10 A, 125 V. Using this unit at a voltage other than 120V may require the For the customers in USA BVMD20F1U, BVM You are cautioned that any changes or modifications not The shielded interface cable recommended in this manual FCC Rules. For the customers in Canada BVMD20F1U, BVM This product with the CE marking complies with both the. Community. Compliance with these directives implies conformity to the This product is intended for use in the

following. Electromagnetic Environments. E1 residential, E2 commercial and light industrial, E3 TV studio. Ce produit portant la marque CE est conforme à la fois à la CEE émise par la Commission de la Communauté. La conformité à ces directives implique la conformité aux Ce produit est prévu pour être utilisé dans les E1 résidentiel, E2 commercial et Industrie légère, E3 Dieses Produkt besitzt die CE-Kennzeichnung und erfüllt.

Die Erfüllung dieser Direktiven bedeutet Konformität für die Dieses Produkt ist für den Einsatz unter folgenden E1 Wohnbereich, E2 kommerzieller und in beschränktem. MaBe industrieller Bereich, E3 Stadtbereich im Freien und. E4 kontrollierter EMV-Bereich, z.B. Fernsehstudio. The socket outlet should be installed near the equipment Voor de klanten in Nederland. Bij dit product zijn batterijen geleverd. Wanneer deze leeg zijn, moet u ze niet BC printplaat BAT1. Note. Be sure to use the supplied power cord for this monitor, or Remarque. Utiliser le cordon d'alimentation fourni pour ce moniteur, Hinweis. Dieser Monitor darf ausschließlich mit dem mitgelieferten. Netzkabel betrieben werden, weil anderenfalls der Monitor Green and yellow Earth. Blue Neutral. Brown Live. As the colours of the wires in the mains lead of this The wire which is coloured green and yellow must be The wire which is coloured blue must be connected to the The wire which is coloured brown must be connected to the Ensure that your equipment is connected correctly if you Nota. Utilice sin falta el cable eléctrico que viene con este monitor; Comunidad Europea. Nota. Assicurarsi di usare il cavo di alimentazione in dotazione per ATTENTION When the product is installed in a rack If installed in a closed or multiunit rack assembly, the Therefore, Installation of the equipment in a rack should be such that Mounting of the equipment in the rack should be such Consideration should be given to the connection of the Appropriate consideration of equipment nameplate Reliable earthing of rackmounted equipment should be Upper and lower gap of rackmounted equipment should Achtung bei Installation des Geräts in einem Gestell; Wird das Gerät in einem geschlossenen Gestell Oder Achten Sie daher bitte besonders darauf, das Gerät in Umgebungstemperatur von 0 bis Das Gerät muß so im Gestell installiert werden, daß eine.

Belüftung gewährleistet ist, die für den sicheren Betrieb Das Gerät muß so im Gestell installiert werden, daß nicht Unfallgefahr entsteht. Der Anschluß des Geräts an das Versorgungsnetz Bitte beachten Sie Überspannungsschutz und die physischen Komponenten Beachten Sie in diesem Zusammenhang unbedingt die. Angaben auf dem Typenschild am Gerät. Geräte, die in einem Gestell installiert werden, benötigen Achten Sie insbesondere auf. Anschlüsse an das Versorgungsnetz, die nicht direkt an Halten Sie zur Ober- und Unterseite eines in einem. Gestell installierten Geräts einen Abstand von 44 mm ATTENTION When the product is installed in a rack If installed in a closed or multiunit rack assembly, the Therefore, Installation of the equipment in a rack should be such that Mounting of the equipment in the rack should be such Consideration should be given to the connection of the Appropriate consideration of equipment nameplate Reliable earthing of rackmounted equipment should be Upper and lower gap of rackmounted equipment should Achtung bei Installation des Geräts in einem Gestell Wird das Gerät in einem geschlossenen Gestell oder Achten Sie daher bitte besonders darauf, das Gerät in Umgebungstemperatur von 0 bis Das Gerät muß so im Gestell installiert werden, daß eine. Belüftung gewährleistet ist, die für den sicheren Betrieb Das Gerät muß so im Gestell installiert werden, daß nicht Unfallgefahr entsteht. Der Anschluß des Geräts an das Versorgungsnetz Bitte beachten Sie Überspannungsschutz und die physischen Komponenten Beachten Sie in diesem Zusammenhang unbedingt die. Anschlüsse an das Versorgungsnetz, die nicht direkt an Liber Verlängerungskabel, erfolgen, Halten Sie zur Ober- und Unterseite eines in einem. Gestell installierten Geräts einen Abstand von 44 mm. Table of Contents. Chapter 1 Overview. Precautions 3. Overview 4. Features 4. Options 5. Connector Panel Configuration 7. Installing a Decoder Adaptor 9. Location and Function of Parts 10. Front Panel 10.

Rear Panel 12. BKMIOR Monitor Control Unit Optional 15. Installation of the 43 Mask. Chapter 2 Menu Basic Menu Operations 22. Menu Operation Buttons 22. Displaying the Menus 23. Menu

Operation 23. ADDRESS Menu 26. Menu Structure 27 Overview 28. Structure of the CONTROL PRESET ADJ Menu 28. Setting Lists in the CONTROL PRESET ADJ Menu 28 Overview 30. Structure of the COLOR TEMP ADJ Menu 31. Setting Lists in the COLOR TEMP ADJ Menu 32 Overview 35. Structure of the INPUT CONFIGURATION Menu 36. Setting Lists in the INPUT CONFIGURATION Menu 37 Overview 40. Structure of the REMOTE Menu 40. Setting Lists of the REMOTE Menu 41. I C3 1 Setting the Password SET UP 3 Overview 42. Structure of the PASSWORD Menu 42. Setting Lists of the PASSWORD Menu 42 Menu 44. Overview 44. Structure of the SYSTEM CONFIGURATION Menu 44. Setting Lists of the SYSTEM CONFIGURATION Menu 45 Overview 46. Structure of the ON SCREEN SET Menu 46. Setting Lists of the ON SCREEN SET Menu 47. I C6 1 Adjusting Geometry and Convergence SET UP 6 Overview 48. Structure of the ALIGNMENT Menu 48. Setting Lists of the ALIGNMENT Menu 48. I C7 1 Adjusting Beam Landing and Digital Uniformity SET UP 7. Overview 50. Structure of the WHITE UNIFORMITY Menu 50. Setting Lists of the WHITE UNIFORMITY Menu 51 Overview 54. Structure of the EXTEND Menu 54. Setting Lists of the EXTEND Menu 54 Overview 56. Structure of the MEMORY CARD Menu 56. Setting Lists of the MENU CARD Menu 56 Overview 57. Structure of the COPY FROM Menu 57. Setting Lists of the COPY FROM Menu 57 Overview 58. Structure of the STATUS Menu 58. Setting Lists of the STATUS Menu 58. Selecting the Monitor to Control Overview 59. Displaying the ADDRESS Menu 59. Cancelling the Remote Control Mode 60. Exiting the ADDRESS Menu 60. Shortcut Function in the ADDRESS Menu 60. Chapter 3 Appendix. Specifications 61. Available Signal Formats 63. Dimensional Drawing 64. Connection Cable Specifications for Color Temperature Probes 66. Menu Index 68 Precautions.

On safety On installation Do not place the unit on surfaces rugs, blankets, etc. On cleaning. To keep the unit looking brandnew, periodically clean Never use strong On repacking. Do not throw away the carton and packing materials. They make an ideal container which to transport the If you have any questions about this unit, contact your On rack mounting. When the monitor is mounted on a rack, the On magnetism Magnetism will This depends on direction that the unit is installed. This is not equipment failure. In such a case, simply On the CRT. Clean the CRT The surface of the CRT is easily scratched; therefore, This is simply static electricity It will not On displaying the 43 signal BVM. The 169 mask has been attached to the BVM. If the 169 To display the 43 Overview. They are suitable Features. Multiformat High resolution picture tube. The HR Trinitron picture tube produces a clear, high Model. Aperture Resolution at the Using a separate control unit reduces the space needed The monitor is controlled by a separate control unit. Unit or by daisy chain connections. The BVM. BKM10R via an optional BKM32H Monitor Control. Controlling monitor groups. Up to 32 monitors can be controlled from one control Setup and adjustment with the Monitor. Memory Card. You can use an optional BKM12Y Monitor Memory. Card to save and load monitor setup and adjustment The chroma and phase of the decoder are Safe area display. The safe area display function equipped as standard Expandable input capability. GBR input connectors at the factory. The input connector configuration can be easily Up to four Stable color temperature. The internal beam current feedback circuit maintains a Blueonly mode convenient for monitoring All three CRT cathodes can be driven with a blue Matrix selection. The ITU601, ITU709 and SMPTE240M matrix For effective picture size, see "Specifications" on page 61.

The beam landing shift caused by the change in CRT Uniform white can be reproduced on every point of the The uniformity can be Other features Reporting system. PLUGE Picture Line Up Generating Equipment. Options. For external control. BKM10R Monitor Control Unit. BKM11R Monitor Control Unit. A controller, allowing you to control multiple monitors BKM12Y Monitor Memory Card. Memory cards which can be read and written by the. BKM14L Auto Setup Probe. A probe, allowing the automatic adjustment of this For installation. BKM30E20 Rack Mount Kit. BKM32H Monitor Control Unit Attachment Kit. Assembly kit for attaching a BKM10R Monitor. BKM34H Monitor Control Unit Attachment Kit. Assembly kit for attaching a BKM10R Monitor

Overview. Decoder and input expansion adaptors. The input connector panel is configured by sliding the The input signal type for each connector of the adaptor When installing the adaptor, be sure to perform the CONFIGURATION menu. If the setup is not For information about the INPUT CONFIGURATION BKM20D SDI 422 Decoder Adaptor. Includes decoders for serial digital component signals BKM21D SDI Multi Decoder Adaptor BKM22X SDI Input Expansion Adaptor BKM24N NTSC Decoder Adaptor. Includes decoders for analog composite NTSC signals. BKM25P PAL Decoder Adaptor. Includes decoders for analog composite PAL signals. BKM26M PALM Decoder Adaptor. Includes decoders for analog composite PALM BKM27T TriStandard Decoder Adaptor. Includes decoders for analog composite NTSC, PAL, BKM28X Analog Input Expansion Adaptor BKM41 HD HD SDI Input Adaptor one HD SDI Includes a decoder for HD serial digital signals and BKM42HD HD SDI Input Adaptor two HD SDI Includes a decoder for HD serial digital signals and BKM48X HD Analog Input Expansion Adaptor The unit comes standard with connectors for one. By adding the optional The signals that each of the CONFIGURATION menu. CONFIGURATION menu is input.

<http://www.drupalitalia.org/node/77281>