

## Dp-8045 Manual



**File Name:** Dp-8045 Manual.pdf

**Size:** 1642 KB

**Type:** PDF, ePub, eBook

**Category:** Book

**Uploaded:** 8 May 2019, 14:20 PM

**Rating:** 4.6/5 from 587 votes.

**Status:** AVAILABLE

Last checked: 11 Minutes ago!

**In order to read or download Dp-8045 Manual ebook, you need to create a FREE account.**

**[Download Now!](#)**

eBook includes PDF, ePub and Kindle version

[Register a free 1 month Trial Account.](#)

[Download as many books as you like \(Personal use\)](#)

[Cancel the membership at any time if not satisfied.](#)

[Join Over 80000 Happy Readers](#)

### Book Descriptions:

We have made it easy for you to find a PDF Ebooks without any digging. And by having access to our ebooks online or by storing it on your computer, you have convenient answers with Dp-8045 Manual . To get started finding Dp-8045 Manual , you are right to find our website which has a comprehensive collection of manuals listed.

Our library is the biggest of these that have literally hundreds of thousands of different products represented.



## Book Descriptions:

# Dp-8045 Manual

Before. Page 2 Operating Instructions Operating Instructions Please refer to the appropriate manual. The following icons are used in this manual. Page 4 Table of Contents Table of Contents Using a Mailbox Confidential Communication. "Mail Box" 64 Page 6 What Internet Fax Can Do. 100 Page 9 Memo Page 11 Chapter 1. Basic Menu Screen Chapter 1. Getting To Know Your Machine Page 14 Basic Fax Transmission Chapter 2 Chapter 2 Page 15 3 Enter the fax number using the z If the line is busy, the number is automatically Page 18 Using the Address Book Chapter 2 Page 19 Use Group Dialling. For transmission to multiple destinations using Chapter 2 Page 21 Search through the LDAP Server LDAP Search. LDAP search is a feature that searches through the Address Book of. Page 22 5 Select "Fax Number" to display a list z To add the found destination to the Address To redial the most recently dialled number, follow the steps below. Page 24 Preventing Accidental Transmission to Multiple Destinations When Confirmation of the You can confirm the entered destinations. Page 26 3 Select the desired field button, and Chapter 2 Page 27 Chapter 2 Basic Fax Transmission This feature is. Page 29 Talking to the Remote Party Before. Transmission If an external telephone is connected to your machine, you can. Page 30 Setting Original Quality Chapter 2 Page 32 Resolution Chapter 2 Basic Fax Transmission. Page 33 Chapter 2 Basic Fax Transmission Page 35 5 Select the Original Size, and then 8 Press the Start key. Page 36 Transmitting 2 Sided Originals Chapter. Page 37 5 Select a binding position, and then Chapter 2 Page 39 Chapter 2 Basic Fax Transmission Chapter. Page 41 To send documents using Memory transmission, follow the steps below. This is an example when the. Direct transmission is set. <http://sivakandiah.com/userfiles/compaq-d530-service-manual.xml>

- **dp-8045 manual, panasonic dp-8045 manual pdf, panasonic dp-8045 manual, panasonic dp-8045 service manual, dp-8045 manual.**

Page 42 Job Build and SADF Page 43 6 Select "Address Book", and then z If you do not place the next originals within Page 44 Direct Transmission Chapter 2 Page 45 6 Select "Address Book", and then Page 46 Verifying Communication Status Chapter 2 Page 47 Rotated Transmission Chapter 2 Access If your PBX requires a PIN Personal Identification Number code. Page 50 Using Program Keys Chapter 2 Chapter 2 Chapter 2 Page 56 Convenient Fax Features Chapter 3 Chapter 3 Page 57 5 Set the deferred time, and then select 8 Press the Start key. Chapter. Page 59 5 If a password is required, enter the Chapter 3 The other station. Page 61 5 Select a destination. Chapter 3 Page 65 Confidential Transmission. To transmit a confidential document, follow the steps below. Page 66 Confidential Polling Page 67 Storing Documents for Confidential Polling This section To print a received confidential document, follow the steps below. Chapter 3 Chapter 3 Page 73 Sub Addressed Transmission Using Address Book. To transmit a document by subaddressing, follow the steps below. Chapter 3 Convenient Fax Features To enter a subaddress directly from the Keypad, follow the steps below. Chapter 3 To utilize the Password protected Transmission feature, follow the steps below. Page 78 Setting Password Protected Transmission Chapter 3 Page 80 Printing Communication Journal Chapter 3. Page 82 Transmitting a Document with a Cover Sheet Page 83 1 Place originals. 6 Select "On", and then select "OK". Page 84 Fax Reception Chapter 4 Chapter 4. Page 85 Manual Reception. When your machine is set to this mode, it will not receive documents automatically. After you answered Chapter 4 Page 87 When Print Reduction is Set to "Fixed". Page 88 Substitute Memory Reception Page 89 Chapter 4 Fax Reception Program these features as. Chapter 4 Page 91 Fax Forwarding. This feature allows all incoming faxes to be forwarded to the station registered in the Address Book. It. Page 92 Password Reception Chapter 4 Page 93 Junk Fax

Filter. <http://www.viva-web.de/uploads/compaq-d530-manual.xml>

This machine can filter incoming faxes to prevent receiving unnecessary documents junk fax, etc..Before. Page 94 Receive to Memory. Chapter 4Page 95 Programming Memory Reception. To enable memory reception, follow the steps below.Chapter 4. Page 97 6 If a password is preprogrammed,Chapter 5Page 99 Routing. You can forward fax documents or Email to an Internet Fax or to networked computers.Chapter 5When this machine receives Email from an Internet Fax or a computer, it starts printing the EmailIf the sender Internet Fax desires a processing confirmation, it must request a Message Delivery. Notice. Page 104 Direct Internet Fax Transmission Using Direct SMTPPage 105 Chapter 5 Internet FaxChapter. Page 107 Dual Port CommunicationPage 108 Preparing to Use Internet FaxPage 109 Sending Email This machine Other Internet Fax machine or PCChapter 5Chapter 5Use the Domain ListPage 114 Using the Address BookChapter 5Page 115 Use Group Dialling. For transmission to multiple destinations withChapter 5Page 117 Search through the LDAP Server LDAP Search. LDAP search is a feature that searches through the Address Book on. Page 118 6 Select a destination, and then selectInternet FaxPage 119 Chapter 5 Internet FaxPage 121 Setting Cc and Bcc. To set Cc and Bcc as Email destinations, follow the steps below.Page 123 Setting Subject Confirming the Destination. Every time you send an Email, you can enter its You can confirm the entered. Page 124 Setting a File Type and a File NamePage 125 7 Enter a filename, and then selectPage 126 Emailing an A3Sized DocumentChapter 5. Page 127 5 Select "A3 Email XMT". 7 Select "Address Book", and then setChapter 5Page 130 When Email Transmission FailsPage 131 Using a Completion Notice. The Completion Notice feature notifies your computer when Email or Fax transmission is completed.Page 133 Receiving Email ManuallyPage 135 Chapter 5 Internet FaxWhen you open an Email received from Internet Fax, the screen as shown below is displayed.

Chapter 5Page 139 Routing Setup Flow. Before the Inbound Routing feature can be used, the Function Parameters and Address BookPage 140 Settings for Inbound RoutingPage 141 Programming the Address Book for Inbound Routing. To use the Inbound Routing feature, program the transferring destination in the Address. Page 142 7 Enter a Key Name, and then select 9 Select whether to add the EmailPage 143 11 To enable routing by a numeric ID,Chapter 5Page 145 Internet Relay StationChapter 5. Page 147 Example of a Relayed Transmission Network. An example of a Relayed transmission network using relay stations at two locations is. Page 148 Sample Entries in Address BookChapter 5Page 149 Table 3 Relay Station SingaporePage 151 Item Required Function Parameters ExplanationPage 153 6 Enter a station name, and then select 8 Select whether to add a station toPage 155 7 Select an end receiving station toPage 156 Relayed Transmission from PCRequesting a Relayed transmission, fill the field in your mailer that corresponds to. Page 158 Convenient Application SoftwareChapter 5Page 159 Chapter 5 Internet FaxPage 161 No. Item ExplanationChapter 5Page 163 Chapter 5 Internet FaxPage 165 Reading the Reservation Report. Items covered in the reservation report are as follows.Page 166 Editing Communication Reservations. Chapter. Page 167 8 Edit the destination.Chapter 6Communication reservation files stored in memory can be printed.Page 170 Adding Documents to a Communication Reservation FilePage 171 Resending an Incomplete DocumentChapter 7Page 173 Adding a Fax Number into the Address Book. To add a fax number to the Address Book, follow the steps. Page 174 7 Enter Key Name, and then select 9 Set the Email address of a relayTo add an Email address to the Address Book, follow the steps below. Page 176 7 Enter a Key Name, and then selectChapter 7To edit the station in the Address Book, follow the steps below.Page 179 Printing the Address Book List.

<https://www.airyachtnboat.com/en/article/digistar-250-dual-pulse-manual>

To print the Address Book list, follow the steps below.Chapter 7To program a communication feature on a Program key, follow the steps below.Chapter 7To program multiple destinations on a Program key, follow the steps below.Chapter 7To edit a group dialling, follow the steps below.Page 186 8 Select the destination to beChapter 7To delete a program dialling or group dialling destination,

follow the steps below. Chapter 7 When this machine is connected to a POP server, POP Account name and. Page 190 7 Enter a Key Name program button Chapter 7 Page 193 Viewing Communication Results on Touch Panel Display. To view the communication results on the Touch Panel Display, follow the steps. Page 194 Reading Transaction Journal Chapter 8 The 3digit number is the number Page 197 Items that are covered in the communication journal are listed below. Page 198 No. Item Explanation Chapter 8 Chapter 8 Items in the Address Book list are listed below. Page 202 Program List Chapter 8 Items in the program list are listed below. Page 204 Fax Parameter List Chapter 8 Items in the Fax Parameter list are listed below. Page 206 Individual XMT Journal Chapter 8 Items in the individual XMT journal are listed below. Page 208 No. Item Explanation Chapter 8 Chapter 9. Page 211 Problem Symptom Action Refer to. While Paper out An error message will appear on the display if Chapter 9 Check with the other party. Chapter 9. Page 215 Info. code Problem Action Refer to Page 216 Info. code Problem Action Refer to. Chapter. Page 217 Chapter 9 Solving Problems Chapter 9 Page 219 Checking the Telephone Line. If you do not hear a dial tone when "Monitor" is selected after pressing the Fax. Page 220 Appendix Chapter 10 Chapter 10 Chapter 10 Search. 10, 20, 116. Selective Reception. 90 SMTP Authentication. 162. SubAddress. 17, 72, 73, 75. Subject. Page 224 The following trademarks and registered trademarks are used throughout this manual. Microsoft, Windows, Windows Server, Windows Vista, Excel, PowerPoint, Outlook.

It does not contain warnings or cautions to advise nontechnical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt within this service information by anyone else could result in serious injury or death. In a damp environment, a contaminated connector can draw a significant amount of current that can generate heat and eventually cause fire if left unattended over an extended period of time. When an extension power cord is required, always use a properly rated cord. Do not place a heavy object on the cord. A damaged cord can cause fire or electric shocks. Danger of electric shock exists. Using a damaged cord can cause fire or electric These conditions can cause fire. Immediately switch Off and unplug the machine, and contact the authorized Panasonic Disconnecting a live connector can cause arcing, consequently deforming the plug and cause fire. Pulling on a cord forcibly can damage it, and cause fire, or an electric shock. If an unused machine is left connected to a power source for a long period, degraded insulation can cause electric shocks, current leakage or fire. Access to a live machines interior can cause an electric shock. PJJXC0110ZB Pana s onic Communication s Co., Ltd. Di g ital Ima g in g Company 2005 P a n as onic Comm u nic a tion s Co., Ltd. All Right Re s erved. M a de in J a p a n A do b e Re a der 5.0 or newer i s req u ired a nd m us t b e in s t a lled to re a d the Oper a ting In s tr u ction s. Un au thorized copying a nd di s tri bu tion i s a viol a tion of l a w. Pana s onic Communication s Co., Ltd. Di g ital Ima g in g Company PJJXC0097ZB The following Operating Instruction manuals are included with this machine. Please refer to the appropriate manual and keep all manuals in a safe place for future reference.

If you lose a manual, contact an authorized Panasonic dealer. Operating Instructions For Setting Up This manual contains essential information for setting up the machine. Copy Function Describes how to make a copy with creative features. Function Parameters Describes how to change the default settings of each function using the Control Panel of the machine. Document Management System CD Print Function Describes how to print, change default printer settings, or describes the course of action to take when a problem message appears, etc. Application Software Describes how to use the application software. Ex Quick Image Na vigator, Network Scanner, Utilities Network Status Monitor, Address Book Editor, Device Configuration Editor Accessories Operating Instructions CD Operating Instructions For Basic Operations This manual contains essential information for proper operation of the machine. Document Management System CD Contains the Application Software,

and manuals with detailed information for the Print function, and Application software. Operating Instructions User Authentication Describes how to enable, and use the user authentication function. Disconnecting a live connector can deform the plug and cause fire. When disconnecting the machine, grasp the plug instead of the cord. Forcibly pulling on a cord can damage it, and cause fire, or electric shock. When the machine is not used over an extended period of time, switch it Off and unplug it. If an unused machine is left connected to a power source for a long period, degraded insulation can cause electric shocks, current leakage or fire. Be sure to switch Off and unplug the machine before accessing the interior of the machine for cleaning, maintenance or fault clearance. Access to a live machine's interior can cause electric shock. Be sure to switch Off and unplug the machine before accessing the interior of the machine for accessing interface cables, maintenance or fault clearance.

Access to a live machine's interior can cause electric shock. Once a month, unplug the machine and check the power cord for the following. If you notice any unusual condition, contact your Service Provider. The power cord is plugged firmly into the receptacle. The plug is not excessively heated, rusted, or bent. The plug and receptacle are free of dust. The cord is not cracked or frayed. If accessing the inner components of the machine to clear misfed paper, etc., exercise care not to touch heated areas, or you may get burned. Power and Ground Connection Cautions Ensure that the plug connection is free of dust. In a damp environment, a contaminated connector can draw a significant amount of current that can generate heat, and eventually cause fire over an extended period of time. Always use the power cord provided with your machine. Do not attempt to rework, pull, bend, chafe, or otherwise damage the power cord. Do not place a heavy object on the cord. A damaged cord can cause fire, or electric shocks. Never touch a power cord with wet hands. Danger of electric shock exists. If the power cord is broken, or insulated wires are exposed, contact your Service Provider for a replacement. Using a damaged cord can cause fire, or electric shocks. Stop operation immediately if your machine produces smoke, excessive heat, unusual noise or smell, or if water is spilt onto the machine. These conditions can cause fire. Immediately switch Off and unplug the machine, and contact your Service Provider. **WARNING** Denotes a potential hazard that could result in serious injury, or death. These symbols are used to alert operators to a specific operating procedure that must not be performed. These symbols are used to alert operators to a specific operating procedure that must be emphasized in order to operate the machine safely. This symbol is used to alert operators to a heated surface that may cause burns and requires close attention.

**Safety Information** A high voltage component can cause electric shocks. Do not try to alter the machine configuration or modify any parts. An unauthorized modification can cause smoke or fire. **Consumable Safeguards** Never throw a toner cartridge into an open flame. Toner remaining in the cartridge can cause an explosion and you can get burnt. Never throw toner or a waste toner container or a toner cartridge into an open flame. It can cause an explosion and you can get burnt. **Operating Safeguards** Do not touch areas where these caution labels are attached to, the surface may be very hot and may cause severe burns. Do not place any liquid container such as a vase or coffee cup on the machine. Spilt water can cause fire or shock hazard. Do not place any metal parts such as staples or clips on the machine. If metal and flammable parts get into the machine, they can shortcircuit internal components, and cause fire or electric shocks. If debris metal or liquid gets into the machine, switch Off and unplug the machine. Contact your Service Provider. Operating a debris contaminated machine can cause fire or electric shock. **CAUTION** Never touch a labelled area found on or near the heat roller. You can get burnt. If a sheet of paper is wrapped around the heat roller, do not try to remove it yourself to avoid injuries or burns. Switch Off the machine immediately, and contact your Service Provider. Do not use conductive paper, e.g. folding paper, carbonic paper and coated paper. When a paper jam occurs, they can cause a short circuit and fire. Do not place any heavy objects on the machine. Keep the room ventilated when using the machine for an extended period of time to minimize the ozone density in the air. When copying with the

document cover open, do not look directly at the exposure lamp. Direct eye exposure can cause eye fatigue or damage. Pull out paper trays slowly to prevent injuries.

When removing jammed paper, make sure that no pieces of torn paper are left in the machine. A piece of paper remaining in the machine can cause fire. If a sheet of paper is wrapped around the heat roller, or when clearing a jammed paper that is difficult or impossible to see, do not try to remove it by yourself. Doing so can cause injuries or burns.

**Installation and Relocation Cautions** Do not place the machine near heaters or volatile, flammable, or combustible materials such as curtains that may catch fire. Do not place the machine in a hot, humid, dusty or poorly ventilated environment. Prolonged exposure to these adverse conditions can cause fire or electric shocks. If tilted, the machine may tip over and cause injuries. When relocating the machine, contact your Service Provider. When moving the machine, be sure to unplug the power cord from the outlet. If the machine is moved with the power cord attached, it can cause damage to the cord which could result in fire or electric shock.

**Operating Safeguards** Do not place a magnet near the safety switch of the machine. A magnet can activate the machine accidentally, resulting in injuries. Do not use a highly flammable spray or solvent near the machine. It can cause fire. When copying a thick document, do not use excessive force to press it against the platen glass. The glass may break and cause injuries. A heated or scratched drum can be hazardous to your health. Be sure to use the specified type of batteries only. Ensure that batteries are installed with correct polarity. Incorrectly installed batteries can burst or leak, resulting in spillage or injuries.

**For Your Safety** Denotes hazards that could result in minor injury or damage to the machine. **TO REDUCE THE RISK OF SHOCK OR FIRE, USE ONLY NO. 26 AWG OR LARGER TELEPHONE LINE CABLE. DISCONNECT ALL POWER TO THE MACHINE BEFORE COVERS ARE REMOVED.** For an outdoor antenna, ask your local electrician for support. Use a coaxial cable antenna.

**Safety Information** Copying certain documents may be illegal in your country. The following are examples of items that may be illegal to copy in your country. Bank notes and checks. Bank and government bonds and securities. Passports and identification cards. Copyright material or trademarks without the consent of the owner. Postage stamps and other negotiable instruments. This list is not inclusive and no liability is assumed for either its completeness or accuracy. In case of doubt, contact your legal counsel.

**Notice** Install your machine near a supervised area to prevent illegal copies from being made. Do not use an extension cord. The power cord on this machine must be used to disconnect the main power. Please ensure that the machine is installed near a wall outlet and is easily accessible.

**Caution** Note Unplug the power cord from the wall outlet before removing covers. This may void the warranty of the machine and supplies. Be sure to use only genuine Panasonic Toner designed for the machine.

**Extremely high or low temperature and humidity.** Where temperature and humidity can change rapidly, causing condensation. Direct exposure to sunlight. Directly in the air conditioning flow. In areas of high dust concentration. In areas of poor ventilation. In areas with chemical fume concentration. In areas with extreme vibration. With unstable or uneven conditions floors, etc..

**Precautions** The supported authentication protocol is NTLM v2. Users login to this machine using their Windows account user name and password. Please consult with the Key Operator regarding the Department Codes for the desired function.

**Procedures** Input a registered department code 1 to 8 digit. If you wish to change the Auto Reset Time, consult with your Key Operator.

21 The designated Key Operators are instructed to perform the recommended security measures described below.

- 1.

- Key Operators are required to verify the identity of the manufacturer's service technician, or of an affiliated company's staff, or marketing company, by requesting their ID Card.
2. Always connect through a Firewall when installing your device on a network that is connected to the Internet. When connecting this device to a client PC, or a server, we recommend configuring your network environment with a switching hub to prevent your device from being wiretapped.
3. A Key Operator

password is essential to maintaining the security of the machine. Key Operators are required to keep the password confidential, and in a safe place. By setting a password, even if the hard disk drive is taken away, the password locked device prevents illicit retrieval of the data by unauthorized personnel. The Hard Disk Drive Lock password is required when the equipment is being repaired. Furthermore, it is essential that the Key Operator personally enter the password to maintain security of the password and prevent unauthorized users. Upon printing, the document data is deleted, thus preventing unauthorized reprinting by a third party. The initial password setting is 00000000 8digit. The password can be set arbitrarily. The Key Operator plays a critical part in maintaining and controlling the security of the machine, and in prevention of its unauthorized access, therefore, it is of utmost importance that you understand the content described in the Operating Instructions, and that you follow the suggestions herein. Telephone Cable is used for connecting the optional Fax Communication Board Order Number DAFG600 to the telephone line.

Control Panel Sheet Bypass Front Cover Right Cover Paper Tray 1 Right Lower Cover Paper Tray 2 Paper Tray 3 Optional System Console Paper Tray 4 Optional System Console Exit Cover Left Cover Optional System Console ADF Automatic Document Feeder Toner Bottle Manual Pocket Store the Operating Instructions in the Manual Pocket for future reference. Paper Transport Knob Green Transport Release Lever Green Fuser Knob Green Power Switch Main Power Switch Telephone Line Cable External Telephone Cable LAN Cable Parallel Cable Print Key Sets the Print function. Energy Saver Key Saves power while the copier is not in use. Interrupt Key Interrupts other copy or print jobs while making copies. Function Key Use when changing the initial function values default values and Key Operator settings. Icon Contents Reset Key Resets all features to the initial power on state. Clear Key Clears the copy quantities, etc. When the machine detects a problem or an alarm status is activated, the 11 Status LED lights or begins to flash. Please consult with the Key Operator regarding the departmental Identification Codes for the desired function. Use only gentle finger pressure to activate the Touch Panel Display. The above image shows everything is lit at the same time. This is for illustration purposes only, the machine will never have all icons, lit, or flashing at the same time. Refer to pages 17 to 20 for details of each functions image. Input an Identification Code with the Keypad. Copy Direction and Paper Direction Indication Copy Ratio Indication Original Direction Indication Function Categories PROOF SET Button JOB SETTINGS Button Selected copy jobs will be indicated on the right side of the touch panel display. This is for illustration purposes only, the machine will never have all icons, lit, or flashing at the same time. Refer to pages 17 to 20 for details of each functions image. 12 26 25 19 20 21 22 23 24 18 Use Fine or Super Fine for detailed documents.

Original Shows the type of original. Contrast Indication The scanning contrast densities which are set in the Mode Setting screen are displayed in 7 levels. MODE SETTING Button More setting can be configured by pressing the MODE SETTING Button. KEYBOARD Button Allows manual input of the email address. DESTINATIONS Button Confirm selected address. Scroll Buttons Displays the other destination screen of same alphabetical tab group. Address Tabs Selects an alphabetical tab group from the Address Book. Resolution Your machine is preset to 300dpi resolution, which is suitable for most documents. Contents MODE SETTING Button More setting can be configured by pressing the MODE SETTING Button. For more details, refer to the Operating Instructions For DD Server. Scroll Buttons Displays the other destination screen of same alphabetical tab group. JOB CONTROL Tab Allows you to select OFF LINE, ON LINE, CANCEL PRINT, JOB QUEUE functions. OFF LINE Button Allows you to temporarily take your printer OFF LINE when you want to cancel a print job, etc. Contents ON LINE Button Allows you to return your printer ON LINE after taking it OFF LINE with the OFF LINE Button. CANCEL PRINT Button Allows you to cancel a print job before the printing has started. ADF Tray Original Guides Adjust to the original's width Upper Guide Upper Limit Indicator When copying a thick Booklet, open the ADF and verify that the ADF Hinge was returned to original position if the rear of the ADF was raised. 1 2 3 4 Notice for ADF. Once the



originals are set, press Star t key, and do not touch the originals as it may cause them to jam. Before setting the originals on the ADF, make sure they are free of clips or staples. Originals that cannot be used. Drawing papers, Transparencies, Labeling paper, Heavy weight papers, Thin Art papers, Film, Thermal papers Inappropriate Originals. Papers which are curled, ripped, creased, folded, punched, glued, stapled or self adhesive.

Originals of assorted mixed width size except for the combination of Ledger and Letter. Pasteups Pressure sensitive or carbon backed papers. Paper with excessive curl. Stapled originals Freshly printed copies from a laser printer which is still wet with color ink or whiteout. Originals with fresh WhiteOut Liquid paper correction fluid Original Guides INV INV LT R LGL LDR LT R LDR INV LT R LGL INV INVOICE INVOICER LETTERR LEGAL LEDGER LETTER LT R If the power is turned OFF, turn ON the Main Power Switch, and then turn ON the Power Switch. During the copy operation and after making copies, the fan motor may start spinning. This is a normal operation and is used to cool down the copier. When the desired size of paper is not set in the Paper Tray, use the sheet Bypass. See page 55 Original and Copy size are automatically selected. Place Originals on the ADF or Platen Glass. Enter the desired number of copies, and then press the Star t key. Adjust the Manual Contrast 7 levels or Select type of Originals Mainly Text Text and Photo combined Mainly Photo Ex Copy Contrast and Original Mode. Clear Key When changing the number of copies, press the Clear key and reenter the corrected number of copies. Number of Copies The maximum number of copies is up to 999 3 digits with keypad. When the optional Fax Communication Board DAFG600 is installed During the copy mode, if you input 48 digit numbers, they will be interpreted as being a phone number and displayed on the LCD, then the machine will switch to the Fax mode. NOTE To stop the copy job, press the Stop key. The cancellation message will appear on the LCD. If this occurs, follow the instructions on the LCD. When clearing the copy mode settings, press the Reset key. See NOTE Start Key Reset Key Stop Key Selection Prints displayed area on the PC screen. Current Page Prints displayed page. Pages Prints selected pages. Starts to printing documents. Closes the print dialog box.

<https://www.thebiketube.com/acros-digistar-manual-mesa-pc>