



File Name: canon b840 fax machine manual.pdf

Size: 1731 KB

Type: PDF, ePub, eBook

Category: Book

Uploaded: 25 May 2019, 18:24 PM

Rating: 4.6/5 from 563 votes.

Status: AVAILABLE

Last checked: 4 Minutes ago!

In order to read or download canon b840 fax machine manual ebook, you need to create a FREE account.

[**Download Now!**](#)

eBook includes PDF, ePub and Kindle version

[Register a free 1 month Trial Account.](#)

[Download as many books as you like \(Personal use\)](#)

[Cancel the membership at any time if not satisfied.](#)

[Join Over 80000 Happy Readers](#)

Book Descriptions:

We have made it easy for you to find a PDF Ebooks without any digging. And by having access to our ebooks online or by storing it on your computer, you have convenient answers with canon b840 fax machine manual . To get started finding canon b840 fax machine manual , you are right to find our website which has a comprehensive collection of manuals listed.

Our library is the biggest of these that have literally hundreds of thousands of different products represented.



Book Descriptions:

canon b840 fax machine manual

All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual, or otherwise, without the prior written permission of Canon Inc. This guide contains information for three Canon models. Please note that the illustrations of the fax in this guide may differ from your model. Instructions for specific models are labelled with the fax names. This item is only included in some countries.

Removing the shipping materials Remove the protective piece a. Insert the tabs on the multi purpose tray into the slots on the unit. Keep opened packs in their original packaging, in a cool, dry location. Lower the cartridge lock lever until you hear a click to lock the cartridge in place. The yellow post BJ cartridge guide should be visible through the slot. The BJ cartridge tilts slightly to the left in the loaded position. **CANEN** Use the numeric buttons to enter the correct letter over the incorrect CANON letter. Before you can use the UCanTalk feature, you must register voice tags. You can register a name or phrase no longer than 3 seconds you want to use to retrieve the party, such as the first name, family name, nickname, company name, official position, and so forth. Press to select YES. The maximum size of document that can be loaded is 216 mm wide by 700 mm long. Scanned area The actual area scanned by the fax is shown below. You will hear a beep. If you have trouble feeding multipage documents from the document tray into the fax, remove the stack and tap it on a flat surface to even the edges. You can make up to 99 copies of one document at a time. If you make copies of multiple documents at a time, the number of pages the fax can scan into memory varies depending on the scanning resolutions see

p. <http://everfunart.com/everfun/uploadfiles/1605863859.xml>

- **canon fax b840 user manual, canon b840 fax machine manual, canon b840 fax machine manual download, canon b840 fax machine manual pdf, canon b840 fax machine manual free, canon b840 fax machine manual software.**

Adjusting the quality of your documents Setting the scanning resolution Resolution is a measure of the fineness or clarity of a printout. Low resolutions may cause text and graphics to have a jagged appearance, while higher resolutions provide smoother curves and lines, crisp text and graphics, and a better match to traditional typeface designs. **DIRECTORY DIAL** Press a numeric button to enter the first letter of the name of the party 01 Canon CANADA you are searching for. The fax begins calling the number. If a person answers, pick up the handset and converse normally. If you want to send a document, load the document face up into the document tray see Loading documents, p. To determine which mode best suits your requirements, see the table below. **Receive Mode Main** Use Operation Requirements Details **FAX ONLY MODE** Answers all calls as fax calls. Use the microphone on the operation panel to record your outgoing message. Only one outgoing message, no longer than 20 seconds, can be recorded. To use this feature, **LINE MONITOR VOL** see p. 50 must be set to a setting other than 0. If **LINE MONITOR VOL** is set to 0, you will not be able to hear any incoming messages as they are being recorded. Use the microphone on the operation panel to record your voice memo. If you record a new voice memo when there is already a voice memo recorded, the old voice memo will be deleted. If a voice memo has been recorded, it will be played back first. The outgoing message will be played. Enter your password when you hear the beeps indicating that you should enter your password. When your password is accepted, you will hear a confirmation tone a short series of beeps. The fax will now accept remote control commands see List of remote control commands, p. These operations can be printed out in the form of activity reports that can help you

check the dates and times of fax transmissions and whether or not each transaction was successful. <http://aradovan.com/userfiles/dynamics-gp-training-manuals.xml>

Do not use tissue paper, paper towels, or similar materials for cleaning. Disconnect the power cord from the fax, then open the printer cover. While holding the white sheet open, clean the components. The yellow post BJ cartridge guide should be visible through the slot. The BJ cartridge tilts slightly to the left in the loaded position. Do not remove a used BJ cartridge except to replace it with a new one. The fax may have overheated. The fax may not be set to switch automatically between telephone and fax reception. Message Cause Action AUTO REDIAL The fax is waiting to redial the receiving Wait for the fax to automatically redial number because the line was busy or the the number. Clear the paper jam see p. 55. However, documents stored in the fax memory will be deleted and redial data in the extension phone memory may be lost. Please do not offer the downloaded file for sell only use it for personal usage. Looking for other manual For this no need registration. May be help you to repair. You could suffer a fatal electrical shock. Instead, contact your nearest service center. Note! To open downloaded files you need acrobat reader or similar pdf reader program. In addition, Also some files are djvu so you need djvu viewer to open them. These free programs can be found on this page needed progs If you use opera you have to disable opera turbo function to download file. If you cannot download this file, try it with CHROME or FIREFOX browser. Translate this page Relevant FAX forum topics Canon FAXB140 Sziasztok! A fenti fax hibaja, az eredeti papir beolvasasa utan, hirtelen megfordul a laptovabbito motor forgas iranya es a kiadas helyett visszahuzza a papirt. Az eppen indulo tintapatron pedig elakad az eredeti papirban. A hiba nem mindig jelentkezik, altalaban 12 napig jol mukodik. L350 canon fax nem nyomtat sziasztok! ALL clearen tul vagyok. Mi lehet ez Udv Wolf You can write in English language into the forum not only in Hungarian.

And by having access to our ebooks online or by storing it on your computer, you have convenient answers with Canon B820 Manual. To get started finding Canon B820 Manual, you are right to find our website which has a comprehensive collection of manuals listed. Our library is the biggest of these that have literally hundreds of thousands of different products represented. I get my most wanted eBook Many thanks If there is a survey it only takes 5 minutes, try any survey which works for you. Read this guide before operating this equipment. After you finish reading this guide, store it in a safe place for future reference. Important safety instructions. vi. For your safety Australia only. viii. Caution New Zealand only. viii. Removing the shipping materials. 12. Assembling the fax. 13. Attaching components. 13. Making connections. 14. Connecting the telephone line, handset, and Connecting the AC power cord. 15. Setting the language. 15. Loading paper. 16. Paper guidelines. 16. Loading paper in the multipurpose tray. 17. Installing the BJ cartridge. 18. Guidelines. 18. Installing the BJ cartridge in your fax. 19. Testing the fax. 110 Fax controls the operation panel. 22. Guidelines for entering Correcting mistakes. 25. Setting the TEL LINE TYPE. 26. Dialing through a switchboard Registering sender information. 28. Personalizing your fax. 28. Setting the date and time. 28 Setting the summer time. 210. Registering onetouch speed dialing Registering coded speed dialing Registering UCanTalk Modifying voice tags. 216. Deleting voice tags. 216 Types of documents you can scan. 31. Problem documents. 31. Loading documents. 32. Problems with multipage documents. 32. Paper requirements. 33. Printable area. 33. Loading paper. 33 Adjusting the quality of your documents. 51. Sending methods. 52. Dialing methods. 52. Sending documents. 52. Direct sending. 52. Memory sending. 53. Manual sending. 54. Canceling sending. 55. Automatic dialing. 55.

Sending a document using onetouch speed Sending a document using directory dialing. 56. Sending a document using UCanTalk. 57. Special dialing. 58. Sending a document using caller history. 58. Longdistance dialing. 58. Redialing when the line is busy. 59. Manual redialing. 59. Automatic redialing. 59. Delayed sending. 511. Sending other documents while the fax is set for Canceling

delayed sending. 512. Sequential broadcasting. 513. Sending a document to more than Documents stored in memory. 514. Printing a list of documents in memory. 514. Printing a document in memory. 514. Deleting a document from memory. 515. Forwarding telephone messages. 712. Different ways to receive. Setting the receive mode. 62. Receiving both documents and telephone calls. Receiving documents manually. Saving ink. 65. Changing calling volume. 65. Receiving documents in memory while performing. Polling to receive documents. 65. Setting CALLER ID. 66. Canceling receiving. 68. Setting the forwarding number. 712. Setting the number of redial times. 713. Setting PIN ENTRY. 714. Activity reports. 87. How to print a report. 87. Activity report. 88. Onetouch speed dialing list. 88. Coded speed dialing list. 88. User's data list. 88. List of documents in memory. 88. TX Transmission report. 88. RX Reception report. 88. Setting the fax for network switch. 68. Operation for network switch system. 68. Jams in the document tray. 91. Jams in the multipurpose tray. 91. Telecom FaxAbility. Periodic cleaning. 92. Setting the fax for network switch. 69. Operation for network switch system. 69. Recording the outgoing message. 71. Types of messages that can be recorded. 71. Recording the outgoing message. 71. Setting TAM MODE. 72. Setting the recording time for a telephone. Setting TAM MONITOR. 74. Setting TOLL SAVER. 75. Recording voice memos. 76. Deleting messages. 77. Playing telephone messages. 78. Remote control features. 79. Registering the password for remote control. 79. Using remote control. 710. Cleaning the exterior of the fax. 92.

Cleaning the interior of the fax. 92. Testing and cleaning the BJ cartridge print. Replacing the BJ cartridge. 95. Troubleshooting. 97. Paper feeding problems. 97. Faxing problems. 98. Copying problems. 912. Telephone problems. 912. Print quality problems. 913. General problems. 913. LCD messages. 914. In case of a power failure. 918. During a power failure. 918. Memory clear report. 918. Specifications. S1. Index. I1. Copyright. No part of this publication may be. Trademarks. Canon, UCanTalk, and BJ are registered trademarks. UHQ is a trademark of Canon Inc. All other product and brand names are registered trademarks, trademarks or service marks of. This guide provides detailed information on how to set up, operate, maintain, and troubleshoot. Please read the list below to become familiar with the symbols, terms, and abbreviations used in. Cautions tell you how to avoid actions that could injure you or damage your fax. In order to use. Notes provide advice on using your fax more effectively, describe operating restrictions, and tell you. Reading these is recommended to make the most of your fax and its. A setting that remains in effect unless you change it. The original sheets of paper you send, receive, or copy with your. A list of settings from which you select an item to set up or change. A. Used to select an item in a menu. Press to select the next item, and. When you send or receive a document, your fax automatically. A transaction. Denotes Transmission. Denotes Reception. LCD display. The contents of the LCD display may vary depending. In addition, this guide uses brackets to identify the buttons you press when performing different. This guide contains information for three Canon models. Please note that the illustrations of the fax in. Instructions for specific models are labelled with the fax. Read these safety instructions thoroughly before using your fax. Except as specifically described in this guide, do not attempt to service the fax yourself.

Never. For all service, contact your local authorized Canon dealer. Follow all warnings and instructions marked on the fax. Do not subject the fax to strong physical shock or vibration. Always unplug the fax before moving or cleaning it. To avoid paper jams, never unplug the power cord, open the printer cover, or remove paper. This will prevent ink spilling inside the fax. Never lift it by any of its attachments or covers. This could result in fire or electric shock. Canon dealer or the Canon help line. If you spill liquid or if any. Canon dealer or the Canon help line. Dust accumulation can prevent the fax from operating properly. Adjust only those controls that are covered by the instructions in this guide. Improper. Make sure that no wet or humid objects come into contact with. Do not place the fax in a cupboard or built-in installation, or near a. Install the fax. For the dimensions of the fax, see. Keep the area free so you can reach. Contact your local authorized Canon dealer or the Canon help line. This product emits low level magnetic flux. If you use a cardiac pacemaker and feel

abnormalities, please move away from this product andTo ensure safe operation the three-pin plug supplied must be inserted only into a standard three-pin power point which is effectively earthed through the normal household wiring. Extension cords used with the equipment must be three-core and be correctly wired to provideThe power point shall be located near the equipment and shall be easily accessible. The fact that the equipment operates satisfactorily does not imply that the power point is earthedFor your safety, if in any doubt about the defectiveCaution New Zealand onlyShould such problems occur, the user is not toTelecom connection and power source and contact your nearest service agent.If this occurs, the problem should not be referredMake sure you have the following items. Main unit. HandsetCarefully remove all items from the box. MultipurposeBX3 Black. BJ cartridge.

You should also have the following. If any of these items are damaged or missing, contact your local authorized Canon dealer or the Canon help line immediately.Close the printer cover until it locks into place.Connecting the telephone line, handset, and. There are three jacks on the back of the fax for connection of the following. Telephone line. Handset. Extension phone a telephone thatBe sure to connect any external devices before using the fax.There is no power switch on the fax. The power is on as long as the fax is plugged in. You need to select the correct language for the LCD display and reports. See pp. 22, 23 for theKeep opened packs in theirDoing so may causePaper limit mark. Tab. No gaps here. Avoid mixing new stock withIf you have trouble, feed one sheet at a time. Within two orAfter drying for several minutes, the inkLet the page dry for approx. 30 to 60 seconds. Then remove the pageIf this happens, cleanThen slide the paper guide b snuglyThe first time you set up your fax, you have to install the BJ cartridge before you can beginFor information on replacing the BJ cartridge, see p. 95.The ink in the BJ cartridge is difficult to clean up if spilled. Follow the precautions below whenIf you need to unplug the fax, wait until it returns to standby mode time and receive mode displayedDo not touch these metallic areas.Make sure the fax is plugged in.Never attempt to reattach them to the BJ cartridge print head.Lower the cartridge lock leverThe yellow post BJ cartridge guide should be visible through the slot. The BJ cartridge tilts slightly toIf the AUTO TEST PRINT setting is set to ON. The fax automatically prints a test page every time you insert a BJ cartridge. You can turn off automatic test printing by changing the AUTO TEST PRINT setting. See SYSTEM. SETTINGS, p. 85. RibbonGuide rail. Round shaft. Circuit board. After you have assembled the fax, loaded the paper, and installed the BJ cartridge, you can makeIf you have problems printing, see Chapter 9.

Document guide. Operation panel. Printer coverCartridge holderThe buttons on the operation panel may differ from the ones shown in this chapter. TAM LED see p. 72 FAXB840 only. MicrophoneClearReceive Mode Resolution. Function. Onetouch speedSpaceReceive Mode Resolution. FunctionSee next page for buttons onReport button see p. 87. Cleaning button see p. 94. Send Options button see pp. 53, 511. R button see p. 26. Space button see p. 25. Clear button see p. 25. Polling button see p. 66. Ink Saver button see p. 65. Caller History button see p. 58. Receive Mode button see p. 62. Resolution button see pp. 41, 51. Function button see p. 26. The buttons on the left of the operation panel have the following two functionsDelete button see p. 77. Record button see p. 71Hook button see p. 54. Stop button. UCanTalk button see p. 57When you come to a step that requires you to enter a name or number, see the table below toButton Uppercase Letter. Mode A. Lowercase Letter. Mode a. Number ModeLowercase letterNumber modeThen press that same numeric button repeatedly until the letter youBefore using your fax, make sure it is set for the telephone line type of your telephone system. IfSee pp. 22, 23 for the buttons on the operation panel.Dialing through a switchboardSee pp. 22, 23 for the buttons on the operation panel.If you selected HOOKING, proceed to step 7.Enter the outside line access number up to 19 digits using the numeric buttons and thenWhen sending a document, you can have your fax number and your name known as your ID,This information isBy identifying the documents you send, the receiving party will be able to recognize your faxThe illustration below shows a sample document with the

identifying Your name or company name. The date and time you sent the document. The top line includes the name of the receiving party if you send the document using onetouch The date and time appear on the LCD as well as on the documents you send. Precede single digits with a zero.

Registration ends and the fax returns to standby mode. This information appears at the top of each document you send. You can select if the time information in your fax changes to match your Setting ends and the fax returns to standby mode. The quickest way to dial a fax number is to use onetouch speed dialing. This allows you to dial Before you can use onetouch speed dialing, you must You can also register the name of the party and a voice tag; the name appears on the printout off a number is already registered under this onetouch speed dialing button, the number is displayed on See Registering UCanTalk voice tags, p. 215. The fax asks you if you want to register the voice tag. The fax asks you to speak the party's name again. After a tone, speak into the microphone again. If voice tag registration fails three consecutive times, registration will end. If this happens, start Use coded speed dialing to dial a fax number at the press of three buttons. If a number is already registered under this coded speed dialing code, the number is displayed on the See steps 5 to 6, Registering onetouch speed dialing numbers and names, p. 212. Entries with a voice tag are preceded by an icon . Also, the Caller ID function You can register a name or phrase no longer than 3 seconds you want to use to retrieve the If a voice tag is already registered under this speed dialing number, the fax asks you if you want to The fax asks you to speak the name again. After the tone, speak into the microphone again. You can load documents larger than 148 mm wide and 105 mm long. The maximum size of document that can be loaded is 216 mm wide by 700 mm long. Min. Max. 216 mm. If you use documents smaller than A4 size, align the document with the left document guide. Adjust the document guide to the width of the document, and gently insert the top of the You will hear a beep. To avoid feeding problems, make sure the document meets the document requirements see p. 31.

Your fax supports A4, letter, and legal size paper in portrait orientation. You can use regular Your fax does not require special ink jet Look at the label on the Be sure to test paper before purchasing large quantities. Be sure to print within this For details on loading paper in the multipurpose tray, see p. 17. One of the convenient features of the fax is its ability to make high quality copies. You can make If you make copies of multiple documents at a time, the number of pages the fax can scan into Load the document face up into the document tray. See Loading documents, p. 32. See Jams in the document tray, p. 91. Before you send a document, see Chapter 3 DOCUMENTS AND PAPER. Resolution is a measure of the fineness or clarity of a printout. Low resolutions may cause text Using a higher resolution will increase the output quality, but will slow down the scanning speed. Load the document face up into the document tray. See Loading documents, p. 32. After about 5 seconds, the fax returns to standby mode. You can change the resolution setting while the document is being scanned for sending. However, please note that your new setting will only affect the next page scanned. Contrast is the difference in brightness between the lightest and darkest parts of a printed Sending documents See Loading documents, p. 32. You can set the scanning resolution and contrast see p. 51. Use one of the dialing methods described in this chapter. The fax begins sending. See LCD messages, p. 914. However, you can send it with In this case, the fax quickly scans the document into memory. Then it sends the document from memory. This means you do not have to wait for the fax to You can send up to 15 A4 size 5 legal size pages at a time with memory sending based on the. Canon FAX Standard Chart No.1, standard resolution. If MEMORY FULL appears on the LCD during the scanning process, restart sending the See Loading documents, p. 32. You can set the scanning resolution and contrast see p. 51. See Loading documents, p.

32. You can set the scanning resolution and contrast see p. 51. If a person answers, converse normally, then ask them to press the start button on their Make sure the handset is seated If you do not want the fax to beep, disable the OFFHOOK ALARM If this happens, correct the error, then try

sending the documentAutomatic dialing. Sending a document using onetouch speedSee Loading documents, p. 32. You can set the scanning resolution and the contrast see p. 51.The registered name and number appear. Then press the correct onetouch speed dialing button or pressThis procedure can also be used to look up the other party's name and retrieve the number forSee Loading documents, p. 32. You can set the scanning resolution and the contrast see p. 51.To use this feature you must first register the voice tags for UCanTalk see p. 215.See Loading documents, p. 32. You can set the scanning resolution and the contrast see p. 51.If an error occurs every time you speak into the microphone, reregister the voice tag and try againLCD when you receive a call see p. 86. The fax keeps up to 20 latest caller IDs in memory. The caller history feature is only available in some countries. The feature uses the ETSI EN 300 7781If you want to send a document, load the document face up into the document tray see. Loading documents, p. 32 and ask them to press the start button on their fax. See Manual sending, p. 54.When you register a longdistance number, you may have to insert a pause within or after theThe length of this pause can beThere are two methods of redialing manual redialing and automatic redialing. This sectionSee Jams in the document tray, p. 91. When you are sending a document and the receiving party's line is busy, the fax waits theYou can set the fax to redial several timesAutomatic redialing can be turned off and on. The number of redialing attempts and the timeIf all redialing attempts are unsuccessful, the fax will cancel the transmission.

You can set theYour fax can send a document automatically at a preset time. This allows you to take advantageThe fax can only register one preset sending operation at a time.See Loading documents, p. 32. You can set the scanning resolution and contrast see p. 51.Precede single digits with a zero.You can send, receive, and copy other documents even when the fax is set for sending at a presetTo send or copy other documents after setting the fax for delayed sending, simply send or copyDelayed sequential broadcasting is applicable for sending one document to more than one location atSending a document to more than. Sequential broadcasting sends one document to more than one location. You can send to a total of 80 locations as followsYou must press each button within 10 seconds of the preceding one. The fax begins the operationSee Loading documents, p. 32. You can set the scanning resolution and contrast see p. 51.You can also include one location using regular dialing. Remember that when using regularAll transmissions in theRX NO. of each document. Once you know the transaction number of a document in memory,Your fax provides you with several modes for receiving documents. To determine which modeReceive Mode. Main Use OperationRings for every call,DetailsAnswering machineFAX ONLY MODE Fax. Answers all calls as faxSeparate telephoneIf you want to beAllows you to have oneSubscription to the. Telstra FaxStream Duet serviceTelecom FaxAbilityZealand.RequirementsOnce you have decided which mode is suitable for your needs, set the mode by pressingReceiving both documents and telephoneIf the caller wants to send a document after talking to you, askSomeone is trying to send you a document.Receiving documents with an answering. Connecting an answering machine to your fax allows you to receive documents and telephoneFollow these guidelines when using your fax with an answering machine.By enabling this feature, print quality will be reduced.

For highest print quality, disable this feature.If your fax is performing another task or encounters a problem when receiving a document, itMEMORY as well as one or more messages. For an explanation of the messages and details onThe polling feature allows you to request a document to be faxed to you from another faxIn all other cases the Polling. ID is not a concern.Your fax begins receiving the document. Setting CALLER ID. LCD when you receive a call. You can also set the fax to reject unwanted calls FAXB840Contact your localREJECT list see below.NUMBER TO REJECT list. Follow the steps below.MESSAGE must have been recorded.When the fax number is called, theThis means that there is no switching delay at the otherContact Telstra for connection information.The fax returns to standby mode. The procedures for using the network switch system are almost the same as when using the faxWhen you receive calls, however, the fax will respond slightlyWhen you

hear the telephone call ring pattern. Pick up the handset and talk normally. If you hear a slow beep, it means the call is from a fax. If you do not hear an answering machine tone, when you hear the fax call ring pattern (triple ring), after the fax rings, it receives the document automatically. Telecom N.Z. offers the FaxAbility capability. If you subscribe to this service, your line is always on. When the fax number is called, the fax answers. This means that there is no switching delay at the other end. Contact Telecom for connection information. The fax returns to standby mode. If you hear a slow beep, it means the call is from a fax. If you do not hear an answering machine tone, after the fax rings, it receives the document automatically. Recording the outgoing message. Before you use the built-in answering machine (TAM), you must record an outgoing message. Use the microphone on the operation panel to record your outgoing message. Only one outgoing message can be recorded. You cannot receive documents while you are recording a message or voice memo.

Also, the Caller ID Answering message only, used when the recording time is set to 0, See p. 76. The fax receives messages played when any new telephone messages are forwarded to it. To record another type of message, select the type of message you want to record in step 3, and then to record a new outgoing message, repeat steps 1 through 3. Setting TAM MODE allows you to receive telephone messages (ICM) and fax transmissions. When you cancel TAM MODE, any new telephone messages will be played. You can set a maximum recording time of 120 seconds for each message. When TAM MODE is set and a call is received, the fax will respond as described below. When TOLL SAVER is set to OFF, you can specify the number of times the fax will ring. When the call is disconnected, the fax returns to standby mode. When the recording time is set to 0, the alternative outgoing message is played. If an alternative outgoing message is set, there will be a message played. USING TAM MODE FAXB840 only. To use this feature, LINE MONITOR VOL see p. 82 must be set to a setting other than 0. If LINE MONITOR VOL is set to 0, you will not be able to hear any incoming messages as they are being played. USING TAM MODE FAXB840 only. Use this feature when you are going out and want to leave a message for another member of the household. If you record a new voice message, the remaining recording time is displayed on the LCD. The old outgoing message will be played back in order from the oldest message recorded. If a voice message is recorded, use these features when you call home to play back any messages you may have received. You must register a four-digit PIN as your password before you can use these features. When your password is accepted, you will hear a confirmation tone (a short series of beeps). However, if PIN ENTRY is set to OFF see p. 86, it is not necessary to enter your password when you use the FORWARDING MSG feature see p. 712. If you enter two invalid PINs, the fax will play ICM. Repeat. Skip. Stop playback. Delete. Delete all ICM.