



File Name: canon lv-s1 manual.pdf
Size: 1993 KB
Type: PDF, ePub, eBook
Category: Book
Uploaded: 11 May 2019, 12:10 PM
Rating: 4.6/5 from 664 votes.

Status: AVAILABLE

Last checked: 12 Minutes ago!

In order to read or download canon lv-s1 manual ebook, you need to create a FREE account.

[Download Now!](#)

eBook includes PDF, ePub and Kindle version

[Register a free 1 month Trial Account.](#)

[Download as many books as you like \(Personal use\)](#)

[Cancel the membership at any time if not satisfied.](#)

[Join Over 80000 Happy Readers](#)

Book Descriptions:

We have made it easy for you to find a PDF Ebooks without any digging. And by having access to our ebooks online or by storing it on your computer, you have convenient answers with canon lv-s1 manual . To get started finding canon lv-s1 manual , you are right to find our website which has a comprehensive collection of manuals listed.

Our library is the biggest of these that have literally hundreds of thousands of different products represented.



Book Descriptions:

canon lv-s1 manual

Do not put any flammable object or spray can near the projector, hot air is exhausted from the ventilation holes. If the projector is not to be used for an extended time, unplug the projector from the power outlet. Do not place this projector on an unstable cart, stand, or table. The projector may fall, causing serious injury to a child or adult, and serious damage to the projector. Use only with a cart or stand recommended by the manufacturer, or sold with the projector. AC Power Cord for the United States and Canada AC Power Cord used in the United States and Canada is listed by the Underwriters Laboratories UL and certified by the Canadian Standard Association CSA. This projector utilizes builtin multimedia features, a palette of 16.77 million colors, and matrix liquid crystal display LCD technology. Compact Design This projector is extremely compact in size and weight. Do not touch this area, especially screw and metallic part. This area will become hot while a projector is used. This projector detects internal temperature and automatically controls operating power of Cooling Fans. Confirm an AC plug type with the chart below and proper AC Power Cord must be used. If supplied AC Power Cord does not match your AC outlet, contact your sales dealer. When the projector is not in use for an extended period, put it into the case carrying bag supplied with the projector. Refer to figures on pages 11 to 13 and connect properly. USB CONNECTOR Series B When controlling the computer. Do not apply benzene, thinner, splay or any chemical material. POWER ON/OFF BUTTON INPUT POWER Used to turn the projector on or off. P19 D.ZOOM BUTTONS Used to select DIGITAL ZOOM mode and resize the image. REMOTE CONTROL BATTERY INSTALLATION Replace with new battery. Install Pull out Battery Holder. Refer to the following pages to operate each adjustment on ONSCREEN MENU. 1 DISPLAY MENU Press MENU button to display ONSCREEN MENU. Refer to "Power Management" on page 36. When WARNING TEMP. <http://ahkjt.com/upfile/inon-d-180-user-manual.xml>

- **canon lv-s1 manual, canon lv-s1 projector manual, canon lv-s1 manual, canon lv-s1 manual pdf, canon lv-s1 manual download, canon lv-s1 manual free, canon lv-s1 manual downloads.**

Indicator flashes red, projector is automatically turned off. Wait at least 5 minutes before turning on projector again. Move ZOOM LEVER downward to make the image smaller. Rotate the FOCUS RING to adjust the projected picture focus. If a projected picture has keystone distortion, correct image with KEYSTONE adjustment. Press KEYSTONE button on Top Control or select Keystone on SETTING menu. To restore to normal, press NO SHOW button again or press any other button. Press PTIMER button on Remote Control unit. SELECTING COMPUTER SYSTEM This projector automatically tunes to most different types of computers based on VGA, SVGA, XGA or SXGA refer to "COMPATIBLE COMPUTER SPECIFICATION" on page 23. When selecting Computer, this projector automatically tunes to incoming signal and projects proper image without any special setting. Adjustment parameters from Auto PC Adjustment can be memorized in this projector. Once parameters are memorized, setting can be done just by selecting Mode in PC SYSTEM Menu P22. Refer to step 3 of MANUAL PC ADJUSTMENT section P26. If this happens, projector cannot reproduce a proper image and the image may be recognized as a flickering picture, a nonsynchronized picture, a noncentered picture or a skewed picture. Select the resolution at Display area dialog box. Display area H Adjustment of horizontal area displayed with this projector. Standard Normal picture adjustment preset on this projector. High contrast Picture adjustment improved in reproduction of halftones. This adjustment is suitable for providing better image in brighter place. Press POINT DOWN button to move a red frame pointer to the item that you want to adjust. The level

of each item is displayed. Press MENU button and ONSCREEN MENU will appear. If projector cannot reproduce proper video source, select correct input source through MENU OPERATION see below. MENU OPERATION Press MENU button and ONSCREEN MENU will appear. http://comobrew.com/newsite/images/user_uploads/inolab-cond-730-manual.xml

Standard Normal picture adjustment preset on this projector. Cinema Picture level adjusted for the picture with fine tone. Custom User preset picture adjustment in IMAGE ADJUST Menu P33,34. Press POINT DOWN button to move a red frame pointer to the item that you want to adjust and then press SET button. The level of each item is displayed. Press MENU button and ONSCREEN MENU will appear. Refer to KEYSTONE ADJUSTMENT on page 20. Blue back When this function is "On," this projector will produce a blue image instead of the video noise on the screen when any input source is unplugged or turned off. To return to the normal code Code 1, operate both projector and Remote Control in the ways above again. NOTE When battery of Remote Control Unit is replaced, the remote. When WARNING TEMP. Indicator continues to flash, check the items listed below. Ventilation Slots of the projector may be blocked. In such an event, reposition the projector so that Ventilation Slots are not obstructed. When a projected image becomes dark or the color of an image becomes unnatural, replacement of Projection Lamp is required. CAUTION For continued safety, replace with a lamp assembly of the same type. The problem may be with your graphics controller rather than with the projector. When you reconnect the projector, be sure to turn the computer and monitor off before you power up the projector. Give the model number and explain the problem in detail. We will advise you of how to obtain service. When connecting the Macintosh computer, MAC Adapter not supplied is required. This projector provides many convenient features and functions. Operating the projector properly enables you to manage those features and maintains it in better condition for a considerable time. Improper operation may result in not only shortening the product life, but also malfunctions, fire hazard, or other accidents.

If your projector seems to operate improperly, read this manual. If you are not sure of the type of power supplied, consult your authorized dealer or Read all of the instructions given here and retain them for later local power company. use. Unplug this projector from AC power supply before cleaning. Do not use liquid or aerosol cleaners. Use a damp Operation is subject to the following two conditions 1 This device may not cause harmful interference, and 2 this device must accept any interference received, including interference that may cause undesired operation. Note This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of FCC rules. Incoming computer video signals are recognized and the It is designed to carry and work anywhere you wish to best adapt. This projector automatically selects the correct input voltage. It is designed to work with single phase power systems having a grounded neutral conductor. To reduce risk of electrical shock, do not plug into any other type of power system. Consult your authorized dealer or service station if you are not sure of the type of power supply being in use. Connect a probe Before replacing Lens Cover, be sure to turn the projector off and disconnect AC Power cord from an AC outlet. Secure Strap for Lens Cover through a hole of Lens Cover. 1 Turn projector upside down and secure Strap for Lens Cover 2 to a hole on the bottom of projector with a screw. STRAP FOR LENS COVER Secure to the hole with a screw. MOVING PROJECTOR When moving Refer to figures on pages 11 to 13 and connect properly. USB CONNECTOR Series B RESET BUTTON VIDEO INPUT JACKS When controlling the computer This projector uses a micro Connect the composite video with Remote Control Unit of this processor to control this unit, output from video equipment projector, connect USB port of and occasionally, this micro INPUT BUTTON POWER ON/OFF BUTTON INPUT POWER Used to select input source. Used to turn the projector P22, 30 on or off.

P19 VOLUME BUTTONS D.ZOOM BUTTONS Used to adjust volume. POINT BUTTONS P20, 35 Used Battery Holder into Remote Control Unit. And it MENU operation. P17, flashes green in Power MENU 18 Management mode. Refer to the following pages to operate each adjustment POINT

BUTTON on ONSCREEN MENU. SET BUTTON Used to select the item. 2 MOVING POINTER MENU
 BUTTON Move the pointer .SCREEN MENU. Refer to P22, 23 Refer to P27 Refer to P29 Press
 POWER ON/OFF button on Top Control or on Remote 3 Control Unit to ON. LAMP Indicator dims,
 and Cooling Fans start to operate. PreMove ZOOM ZOOM LEVER LEVER downward to make the
 image smaller. WIDE TELE FOCUS ADJUSTMENT Rotate the FOCUS RING to adjust the projected
 picture focus. FOCUS RING KEYSTONE ADJUSTMENT If a projected picture has keystone
 distortion, correct image with KEYSTONE adjustment. Unplug this projector from AC power supply
 before cleaning. Air blown from Exhaust Vents is hot. This projector automatically selects the
 correct input voltage. Before operation, pull out and remove a protect sheet from Remote Control
 Unit. Replace with new battery. Install battery and Battery Holder into Remote Control Unit. A red
 frame is POINTER. LAMP Indicator lights RED, and READY Indicator lights GREEN. Press POWER
 ON/OFF button on Top Control or on Remote Control Unit to ON. To cancel FREEZE function, press
 FREEZE button again or press any other button. To restore to normal, press NO SHOW button again
 or press any other button. NO SHOW FUNCTION Message disappears after 4 seconds. Auto PC
 Adjustment function can be operated as follows. Selects area displayed with this projector. Press
 MENU button and ONSCREEN MENU will appear. This function is used to project the image from a
 ceiling mounted projector. Avoid using an excessive amount of cleaner. Abrasive cleaners, solvents
 or other harsh chemicals might scratch a surface. Do not attempt to open the cabinet. This page
 requires Javascript.

Modify your browsers settings to allow Javascript to execute. See your browsers documentation for
 specific instructions. To install your download click on the name of the downloaded file. The driver
 may be included in your OS or you may not need a driver. Recommended Drivers File Name Date
 File Size Optional Drivers File Name Date File Size Recommended Software File Name Date File
 Size Optional Software File Name Date File Size Recommended Manuals File Name Date File Size
 Optional Manuals File Name Date File Size During the warranty period for the Lamp, Canon will, in
 its sole discretion and without charge, exchange a defective Lamp for a new Lamp. Except as set
 forth herein, this Limited Warranty does not cover consumable items as to which there is no
 warranty or replacement. Warranty exchange or replacement does not extend the original warranty
 periods of the Equipment. ADVANCED WARRANTY EXCHANGE SERVICE PROGRAM The Advanced
 Warranty Exchange Service Program the "Program" is a program in which a replacement Product is
 sent to you by Canon and you return to Canon the Product you originally purchased, which becomes
 the property of Canon. To use the Program, contact a Canon Customer Care Representative using
 the applicable Canon contact information below. The Canon Customer Care Representative will
 attempt to diagnose the nature of the problem and, if possible, correct it over the telephone. If the
 Canon Customer Care Representative determines that the Product is eligible for coverage under this
 Limited Warranty and that the problem cannot be corrected over the telephone, a reference number
 and an End User Activation Form will be issued to you. Submission of your signed End User
 Activation Form the "Form" will activate your request for an exchange, and the terms and conditions
 in the Form will govern Canon's provision of services under the Program. When you call, have your
 Product serial number and your date of purchase available to expedite service.

A Canon Customer Care representative will attempt to diagnose the nature of the problem and
 correct it over the telephone. If the problem cannot be corrected over the telephone, you will be
 asked to follow the applicable procedures for MAILIN SERVICE. Note that a dated proof of purchase
 is required at the time of service. This requirement will be satisfied by providing a copy of your
 dated bill of sale. You will be given the name, address and phone number of an authorized service
 center for the Product. It is your responsibility to properly package and send the defective Product,
 together with a copy of your dated proof of purchase, a complete explanation of the problem and a
 return address, to the authorized service center at your expense. Do not include any other items
 with the defective Product. The Product covered by this Limited Warranty and proven to be defective

upon inspection will be repaired and returned to you without charge by the authorized service center. Any Product received by the authorized service center that is not covered by the Limited Warranty will be returned unrepaired, or at the discretion of the authorized service center, you may receive a written estimate of repair at such cost as the authorized service center may establish from time to time. This Limited Warranty shall only apply if the Equipment is used in conjunction with compatible computers, peripheral equipment and software. The sole warranty, if any, with respect to such nonCanon brand item is given by the manufacturer or producer thereof.

Nor does this warranty i extend to any Equipment on which the original identification marks or serial numbers have been defaced, removed or altered, ii cover the adjustment of customeroperated controls as explained in the instruction manual, iii extend to any external interface equipment, iv apply to the cabinet or cosmetic parts, knobs or routine maintenance, or v cover uncrating, set up, installation, removal of the Equipment for repair or reinstallation of the Equipment after repair. During the warranty period for the Lamp, Canon will, in its sole discretion and without charge, exchange a defective Lamp for a new Lamp. Except as set forth herein, this warranty does not cover consumable items as to which there is no warranty or replacement. When returning Equipment for warranty service, shipping charges must be prepaid and the Equipment must be shipped in its original carton or box, or an equivalent. A bill of sale, or other proof of purchase, as well as a description of the problem, must be enclosed. The sole warranty, if any, with respect to such nonCanon brand item is given by the manufacturer or producer thereof. If the problem cannot be corrected over the telephone, you will be asked to follow the applicable procedures for MAIL — IN SERVICE. Authorized service center information can be obtained by visiting www.canontechsupport.com US customers only or by contacting the Canon U.S.A., Customer Care Center or Canon Canada Customer Information Centre at 1800OKCANON 18006522666. It is your responsibility to properly package and send the defective Product, together with a copy of your dated proof of purchase, a complete explanation of the problem and a return address to the authorized service center at your expense. The Product covered by this limited warranty and proven to be defective upon inspection will be repaired and returned to you without charge by the authorized service center.

Any Product received by the authorized service center that is not covered by the limited warranty will be returned unrepaired, or at the discretion of the authorized service provider, you may receive a written estimate of repair at such cost as the service center may establish from time to time. This limited warranty is only effective upon presentation of your Bill of Sale or other proof of purchase. Canon U.S.A., Inc. and Canon Canada Inc. collectively, Canon warrant to the original enduser purchaser, when delivered in new condition in its original container, that the Projector will be free from defects in materials and workmanship under normal use and service for a period of THREE YEARS from the date of original purchase. When returning a Projector under this warranty, you must prepay the shipping charges, and you must enclose a copy of the Bill of Sale or other proof of purchase with a complete explanation of the problem. Projectors returned to a Canon repair facility, and proven to be defective upon inspection, will be, without charge The repaired or exchanged Projector will be shipped back to you free of charge. Warranty exchange or replacement does not extend the original warranty period of the Projector. For repairs after the warranty period has expired, an estimate will be provided of the cost of repair and an opportunity to approve or reject the repair expense before it is incurred. If you approve, repairs will be made and the Projector will be returned at your risk and expense. If you reject, the Projector will be returned to you at no charge to an address within the United States or Canada This limited warranty only applies if the Projector is used in conjunction with compatible computer equipment and compatible software, as to which items Canon will have no responsibility.

NonCanon brand peripheral equipment and software which may be distributed with, or factory

loaded on, the Projector, are sold AS IS without warranty or condition of any kind by Canon USA or Canon Canada, including any implied warranty or condition regarding merchantability or fitness for a particular purpose. The sole warranty with respect to such nonCanon brand items is given by the manufacturer or producer thereof. This Limited Warranty covers all defects encountered in normal use of the Projector and does not apply in the following cases This Limited Warranty does not apply to accessories or consumables for the Projector, which are sold AS IS, without warranty or condition of any kind by Canon USA or Canon Canada. Please retain this warranty card and your Bill of Sale as a permanent record of your purchase. This card ensures that you are contacted promptly should there be a safety inspection, modification or product recall under applicable laws or regulations. Scroll down to easily select items to add to your shopping cart for a faster, easier checkout. Visit the Canon Online Store Its perfect for your front or rearprojection boardroom, conference room, or auditorium setup. It features a laser pointer for emphasizing key points to your audience and can even act in place of your computers mouse optional mouse control cable is required. A must for the serious presenter. Ask your question here. Provide a clear and comprehensive description of the issue and your question. The more detail you provide for your issue and question, the easier it will be for other Canon LVS1 owners to properly answer your question. Ask a question About the Canon LVS1 This manual comes under the category Video projectors and has been rated by 1 people with an average of a 5.3. This manual is available in the following languages English. Do you have a question about the Canon LVS1 or do you need help. Ask your question here Canon LVS1 specifications Brand ManualSearcher.

com ensures that you will find the manual you are looking for in no time. Our database contains more than 1 million PDF manuals from more than 10,000 brands. Every day we add the latest manuals so that you will always find the product you are looking for. Its very simple just type the brand name and the type of product in the search bar and you can instantly view the manual of your choice online for free. ManualSearcher. com If you continue to use this site we will assume that you are happy with it. Read more Ok. The internal 3LCD technology is an innovative 3chip design that sets itself apart by delivering vibrant, true to life images with better color brightness and a wider color gamut. Posted in FixYourDLP, Projector Lamp Replacement Guides Replace the lamp immediately when you see this. Other warning signs may be a dim picture, color that appears washed and a image that is faded. Step 2 Invest in authentic Have your replacement projector lamp ready and waiting. Your Canon LVS1 projector uses the Canon LVLP12 7566A001 projector lamp. Be sure to always install an authentic projector lamp in order for your Canon LVS1 projector to work at its optimum. Why should you avoid counterfeit lamps shorter life no safety guards to protect your eyesight, prone to explosions inside projectors damaging your projector beyond repair created with carcinogenic, toxic substitutes. When the price seems too good to be true — it's a counterfeit. Keep your projector working at its best. Invest in authentic. Step 3; Instal the projector lamp Before changing the projector lamp follow these important safety procedures Unplug the electrical cord on the Canon LVS1 so there is no chance the projector could get turned on during the installation. The Canon LVS1 operates under high temperatures so give it at least one hour to cool down before opening the projector to change the projector lamp. Loosen the two screws holding the Canon LVS1 projector lamp cover in place. Place the cover aside.

Loosen the two screws on the projector lamp and slowly pull out the Canon LVLP12 7566A001 projector lamp assembly by using the built in handle. NOTE The used LVLP12 projector lamp contains mercury and should be properly recycled. Don't throw it into regular garbage. Pulling too quickly can cause the bulb to shatter. Learn how to clean up a broken lamp. Replace the lamp assembly with a new Canon LVLP12 7566A001. Be careful not to touch the actual bulb as oil from your fingers can leave black marks on the lamp. Tighten the two screws on the lamp. Put back the lamp cover and tighten its two screws. Connect the AC power cord to the Canon LVLP12 and turn on the projector to reset the lamp timer. Resetting the lamp timer counter After replacing the Canon

LVL12 projector lamp, you'll need to turn off the LAMP REPLACE indicator by resetting the LAMP REPLACE COUNTER in the Canon LVS1. This counter tracks the number of hours the lamp has been used by the Canon LVS1 and triggers the warning light when the lamp is reaching its end of life. Not resetting it after may stop your projector from turning back on. Turn the projector on and press the MENU. The OnScreen menu will be displayed on the left. Using the arrow buttons, move the red frame pointer to the SETTING menu icon. Press OK to open up as the RESET LAMP COUNTER box. Click on the SET option to open a confirmation window. The message "Lamp replace counter reset" is displayed. Click on YES. Press OK. The lamp hours will be reset to zero. Learn how to prolong lamp life. Top tips for extending projector lamp life. Go green with your Canon LVS1 Do your bit for the environment by recycling the plastic lamp cage and just replacing the Canon LVL1 bulb. Tagged with Canon LVL1 bulb, Canon LVL12 7566A001 projector lamp, Canon LVS1 projector Leave a Reply Cancel reply Your email address will not be published. Please reload CAPTCHA. Learn how your comment data is processed. Join the discussion on Facebook.

All your questions, answered. Multimedia Projector Owner's manual LVS1 TO THE OWNER Before operating this projector, read this manual thoroughly and operate the projector properly. If your projector seems to operate improperly, read this manual again, check operations and cable connections and try the solutions in the "Troubleshooting" section of the end of this booklet. If the problem still persists, contact the sales dealer where you purchased the projector or the service center. Do not stare directly into the lens as possible. Eye damage could result. Be especially careful that children do not stare directly into the beam. If not, it may result in a fire hazard. Minimum distance should be taken. If the projector is to be built into a compartment or similarly enclosed, the minimum distances must be maintained. Do not cover the ventilation slot on the projector. Heat buildup can reduce the service life of your projector, and can also be dangerous. Newest Added GSS25GSHJCSS GTS18XCSFRBB GTH18EBC2RWW JGB916CEK3CC 2020 Ford Fusion SIDE and TOP REAR 50cm 50cm 50cm q Do not put any flammable object or spray can near the projector, hot air is exhausted from the ventilation q If the projector is not to be used for an extended time, unplug the projector from the power outlet. Canon Projector. Canon LVS3 owners manual was published in PDF format. Owner Manual, Operating Instruction, Service handbook. Canon Powershot S3 Service Manual Pdf Manuals and user guide free PDF downloads for Canon PowerShot S3 IS. On this page you can download Canon LV7585 Manual, Canon LV7585 Projectors Manual in English, Download PDF English LV7585 Manual. Full specification images. New User Manuals. Canon LVS3 Manual Download PDF English LVS1 Manual. New User Manuals. Home; Canon LVS3 Manual Projectors. Canon LVS4 Manual Projectors. Recommend it to Canon LVS3 projector specs, Manual Optional Lenses No At just 4.

9 pounds, the LVS3 is Canons lightest projector Form cms588, Texas water commission bulletin 6309 1963, Example of a failed project, Twin screw hull form design, Creek indians document. Reload to refresh your session. Reload to refresh your session. You must have JavaScript enabled in your browser to utilize the functionality of this website. Lamp Timer Notice After installing new bulb, the lamp timer needs to be reset. Please consult your owners manual for information on resetting the lamp timer. Payment will be collected in US dollars. Local customs and duties will be charged by your local government at time of delivery. You may be contacted by customer service with an different freight charges for orders for oversized or heavier items. Please contact us at 800.867.2852 for more details. We will contact you with the charge prior to shipping your order. Each additional delivery will incur additional shipping charges. A Restocking Charge of 20% will apply to all items returned where Topbulb has made no error in merchandizing or shipping. Refunds will be made by original method of payment. All returns must arrive in its original packaging and all freight charges for the return of goods are to be paid by the customer. Topbulb may at any time limit the number of delivery attempts based on unfavorable delivery history. This information is listed on our website within the Specifications section of each product if there is a manufacturers warranty.

After 14 days, the customer is responsible for the shipping cost of warranty replacements. Please note a manufacturers statement of Average Rated Life Hours does not imply a warranty. Please contact us if there is any obvious damage at the time of delivery. Please make all claims for replacement or credit within 14 days of delivery.