

Canon



File Name: canon mp500 owners manual.pdf

Size: 3347 KB

Type: PDF, ePub, eBook

Category: Book

Uploaded: 29 May 2019, 14:14 PM

Rating: 4.6/5 from 807 votes.

Status: AVAILABLE

Last checked: 5 Minutes ago!

In order to read or download canon mp500 owners manual ebook, you need to create a FREE account.

[Download Now!](#)

eBook includes PDF, ePub and Kindle version

[Register a free 1 month Trial Account.](#)

[Download as many books as you like \(Personal use\)](#)

[Cancel the membership at any time if not satisfied.](#)

[Join Over 80000 Happy Readers](#)

Book Descriptions:

We have made it easy for you to find a PDF Ebooks without any digging. And by having access to our ebooks online or by storing it on your computer, you have convenient answers with canon mp500 owners manual . To get started finding canon mp500 owners manual , you are right to find our website which has a comprehensive collection of manuals listed.

Our library is the biggest of these that have literally hundreds of thousands of different products represented.



Book Descriptions:

canon mp500 owners manual

When substantial changes are made to the contents of the manual, Canon will issue a revised edition. The following do not apply if they do not conform to the laws and regulations of the region where the manual or product. Adjustment Timing Purpose Tool time Destination At logic board assy To set the destination. None. 1 min. settings EEPROM replacement Perform in the settings service mode. Application Remarks FLOIL KG QY90057 To be applied to the sliding portions of the carriage shaft and lift cam shaft. The print head is not installed. Install the print head properly. Press the OK button. Memory card is not set. Insert the No memory card is inserted in the slot. Set a memory card. card after checking the direction. DPOF information is not saved in DPOF print was selected in the menu, The error message is displayed for a the memory card. Change the Reselect the supported paper type and size. Graphic or text is enlarged on When enlarged in the carriage movement printouts. When assembling the scanner stop arm unit, make sure it is in the correct orientation, as shown in the photos below overhead view. 118. Improper wiring or connection may cause breakage of a line, leading to ignition or emission of smoke. I Logic board assy wiring II Paper feed motor side wiring 122. With the units assembled, the tube conditions are not visible. To confirm the tube is free from damage, perform the manual purging 3 or 4 times, and confirm that no strange noise is heard. In addition, according to the waste ink amount, replace the waste ink absorber ink absorber kit. The standard amount for waste ink absorber replacement is given in the table below. Contrast adjustment 5 Service mode Function. The destination setting may not be valid unless the EEPROM is initialized after destination settings. Print EEPROM information to confirm that the value is properly set to the EEPROM. <http://asthmaathletics.com/uploads/file/intel-82801eb-motherboard-manual.xml>

- **canon pixma mp500 service manual, canon pixma mp500 user manual, canon mp500 owners manual, canon mp560 owner's manual.**

Purpose To confirm the operation after replacement of the operation panel unit, logic board, or LCD. Automatic print head alignment by user 15. Manual print head alignment by user 16. Wiping count 18. Camera Direct Print supported device connection record Canon legacy, Canon PictBridge, Competitor PictBridge 19. Bluetooth supported device connection record 20. Longest period where printing stops 21. Scanner error status record the last 2 errors, including user errors and scan errors during copying; consecutive same errors are recorded individually To the table of contents To the top. By the LED indication, wrong installation of the ink tanks will be prevented, and the remaining ink level can be visually recognized with the ink tanks seated in the carriage. The combination of the new pigment based black ink with higher resistance against bleeding or marker pens and the new dye based inks with higher photo quality and weather resistance makes the new ink system strong in both photo and text printing. Adopting a compatible USB adapter, the BU20, when attached to the machine, enables wireless printing from a Bluetooth compliant computer or mobile phone. To the table of contents To the top At print head 0.45 Black When the print head is removed and replacement 1.50 Color installed. Absorbed times of Plus Double Sided ink may attach to Bottom plate or postcards, the the platen ribs cleaning, wipe phenomenon is after several dozen the platen ribs likely to be sheets are printed, and their. Be sure to use the appropriate ink tanks in servicing. To the table of contents To the top 321. With plain paper selected for Paper Type, printing is done with borders even when borderless printing is selected. For further information about extending your Canon service and support, call 18003852155, or visit our Web site at www.canonesp.com. CarePAK must be purchased during your product's warranty

period.<http://www.aparto.ru/temp/images/intel-845-mainboard-manual.xml>

All statements, technical information and recommendations in this manual and in any guides or related documents are believed reliable, but the accuracy and completeness thereof are not guaranteed or warranted, and they are not intended to be, nor should they be understood to be, representation or warranties concerning the products described. Specifications are subject to change without notice. User's Guide Read this guide when starting to use the machine. This guide After following instructions in the Easy Setup Instructions, read this guide for instructions on printing from your computer, direct photo. Using the machine in such conditions may result in fire or electrical shock. Then contact the Canon Customer Care Center. Do not use flammable sprays near the machine. Pulling on the power cord may damage the cord and cause a fire or electrical shock. However, if the machine is unplugged during printing, the Print Head is not protected with the cap that prevents the ink from drying. Then, contact the Canon Customer Care Center. Do not touch the highvoltage electrical parts as this may result in electrical shock. If a child ingests any ink, consult a doctor immediately. Do not shake print heads or ink tanks. Ink may leak out and stain clothing or the surrounding area. Never touch the Print Head. The following symbols are used to indicate important instructions. Be sure to obey these instructions. Indicates a warning concerning operations that may lead to death or injury Warning to persons if not performed correctly. The list provided is nonexhaustive. When in doubt, check with a legal representative in your jurisdiction. Extend it before loading paper by putting your finger in the rounded indent and pulling out the extension until it stops. For details, contact the Canon Customer Care Center. 9 Paper Output Tray Printouts are output to this tray. Pull out the extension before printing. Do not pull up this lever after installing the Print Head.

Important 15 Ink Tank Lamp Lights or flashes red to indicate the status of the ink tank. 16 Print Head Holder Used to install a Print Head. While the machine is printing from or scanning images to the computer, or Important the computer is in the sleep mode or standby mode, do not disconnect and connect the USB cable. Turning on the Machine Before turning on the machine, confirm that the Print Head and ink tanks are set into place. If preparatory operations above are not yet finished, follow the Easy Note Setup Instructions to complete them. Document Requirements The documents you load on the Platen Glass for copying or scanning must meet these requirements Document Documents type Photographs Book Size W x L Max. Loading Paper This section describes how to load paper in the Auto Sheet Feeder and the Cassette. You may not be able to purchase some Canon branded paper depending on your country. Paper is not sold in the US by Model Number. Purchase paper by the name. Loading paper in the Auto Sheet Feeder is easy, and is convenient if you frequently switch to and print on various sizes or types of paper. Loading paper in the Cassette allows you to print without reloading paper for each job. Loading the Print Media in the Auto Sheet Feeder Loading Paper For detailed information on the specialty media Canon provides for use Note with its various printers, refer to Requirements" on page Flatten the four corners of the paper before loading it. After printing, to put back the Paper Output Tray Extension, push it back Note while raising it a little. Chapter 1 You can use general copy paper or Canon's Super White Paper SW 201. You can load up to 150 sheets of plain paper 64 gsm or 17 lb, 13 mm or 0.52 inches in height in the Auto Sheet Feeder. A maximum of 10 envelopes can be loaded at once. Note Pinch the Paper Guide and slide it against the left side of the envelope. Note Prepare to load paper. 1 Pull out the Cassette from the machine. 2 Remove the Cover on the Cassette.

Adjust the size of the Cassette. Chapter 1 You can use general copy paper or Canon's Super White Paper SW 201. You can load up to 150 sheets of plain paper 64 gsm or 17 lb, 13 mm or 0.52 inches in height in the Cassette. Prepare the Paper Output Tray. 1 Press the Open Button to open the Paper Output Tray. 2 Pull out the Paper Output Tray Extension completely. Important Align the envelope stack against the right side of the Cassette. The flap of the envelope will appear with its flap facing

UP on the left side. A maximum of 5 envelopes can be loaded at once. For information on the printer driver settings, refer to the Printer Driver Guide. Loading paper in landscape Important orientation B can cause the paper to be jammed. We recommend using genuine Canon photo media when printing Note photographs. Changing the Print Settings This section describes the setting items that can be specified in the Settings screen. Change to here. Complete setting. Some of these are not available depending on the country of purchase. Note 2 You can specify the media type. Plain paper, Photo Paper Pro, Photo Plus Glossy, Matte Photo Paper, Glossy Photo Paper 3 You can adjust image quality according to the documents you want to copy. Tab 2 Allows you to optimize photos with the functions below. For details on changing the copy settings and setting items, see page You can specify the page size. You can specify the media type. You can adjust image quality for the document to be copied. The Special copy screen is displayed. Copying onto Both Sides of the Paper Twosided copy You can copy two document pages onto the sides of a single sheet of paper. Longside stapling and Shortside stapling Procedure 1 Display the Special copy screen. Platen Glass place document face down Procedure 1 Display the Special copy screen. Note Copying without Borders Borderless copy This feature enables you to copy color images so that they fill the entire page without borders.

Procedure 1 Display the Special copy screen. "Special Copy". If you selected. You can use this feature only when the paper is set to,,, Memory Cards Supported by This Machine The following memory cards are compatible with this machine. Memory cards that can be directly inserted into the Card Slot Memory cards that can be inserted in the Card Slot using the adapter Printing from a Memory Card. Use the special adapter provided with the card. Removing the memory card or turning off the printer while the indicator Important lamp is flashing can damage the data stored in the memory card. Close the Card Slot Cover. Printing Photograph Let's select a photo from the photos stored on the memory card of the digital camera, and print it. Displaying Photos Automatically on the LCD Slide Show Note You can automatically display photos in sequence when selecting. Note Set the search method. Crop images after specifying the page size, media type, and bordered or Note borderless printing in the Settings Memory Card. If you change the paper settings after cropping, the cropped area may be adjusted to match the paper, or be disabled completely. Note Printing Several Photos on a Single Sheet of Paper Layout print You can print the specified photos in the specified layout. Prepare for printing. Prepare for printing. "Prepare for printing." on page Note Select the print menu. The print confirmation screen is displayed. Note Start printing. "Start printing." on page Settings cannot be changed when printing stickers. Note Other Printing Functions The following print functions are also provided under the Special photo print menu. In, the print method selection screen is displayed. Simply scanning the Photo Index Sheet prints the selected photographs according to the settings you have made. Prepare for printing. Start printing the Photo Index Sheet. Fill in the appropriate circles print and their print options.

Good A Check mark B Line only C Too light Important Scan the Photo Index Sheet and print photos. 1 Load the paper you selected for the Photo Index Sheet. Canon Bubble Jet Direct allows you to print photos from a Canon Bubble Jet Direct compatible PictBridge incompatible digital camera or digital video camcorder without a computer, by simply connecting the digital camera or digital video camcorder to this machine. If you use the device battery, be sure to charge it fully. Set up the machine. Refer to the Easy Setup Instructions to set up the machine and make it ready for printing. Different names may be displayed on your device depending on the brand or model. This size can be selected only for Canon PictBridge compatible devices note that it cannot be selected for some models. If the optional Bluetooth Unit BU20 is connected to the machine, you can also perform wireless printing from Bluetooth compatible mobile phones. When printing on Canon Photo Stickers, make the settings as below. Media Type Photo Paper Plus Glossy. Printing with Windows Menu and command names may differ between application softwares, and Note more steps may be required. For details, refer to the documentation for each application software you use. For print settings, refer to the Printer Driver Guide. When the Auto Sheet Feeder Lamp A is lit, paper is fed from the

Auto Sheet Feeder. When the Cassette Lamp B is lit, paper is fed from the Cassette. About Scanning Images You can scan images from the machine to a computer without printing them and save them in popular file formats. Scanned data saved on your computer can be processed using image processing software. Scanning Using the Operation Panel of the Machine You can scan documents to your computer by using the Operation Panel. Do not insert or remove USB cables when scanning images with the Important machine connected to a computer, or when the computer is at sleep or standby mode. The document is scanned.

The settings configured from MP Navigator apply when scanning. If with some types of original the position and size of the image is not Important scanned in correctly, please refer to "Selecting the Behavior of the Operation Panel with MP Navigator". Example select. The Print Settings Quiet mode Use this function if you want to reduce the operation noise, such as when printing at night. Important Prevent paper abrasion Use this setting only if the print surface becomes smudged. Media type Specifies the media type for printing photos saved on a mobile phone. Image optimizer Choosing. If you set this setting to, card direct printing cannot be Important done. After you finish operation of the memory card dedicated drive, be sure to revert this setting to. The machine will not print if the wrong type of ink tank is used, or if it is installed in the incorrect position. The machine uses the following ink tanks. Black CLI8BK Black PGI5BK Yellow CLI8Y. Should missing characters or white streaks appear despite sufficient ink levels, Note "When Printing Becomes Faint or Colors are Incorrect" on page The following message appears on the LCD when ink becomes empty during printing. To maintain optimal print quality, use an ink tank within six months of its first Note use. Once an ink tank has been used, do not remove it from the machine and leave it out in the open. Do not touch the Print Head Lock Lever B. Remove only the ink tank. Caution Important Be sure to replace ink tanks one by one when replacing more than one ink Note tank. Refer to the guide label A and insert the ink tank in the correct position. Note 2 Press on the mark on the ink tank until the ink tank snaps firmly into place. 3 Ensure that the ink tank clicks into place and then its lamp lights red B. Printing will not occur if the Inner Note Cover is open. Slowly close the Scanning Unit Printer Cover. The Print Head Holder moves to the right.

If the ruled lines are shifted Step 1 "Aligning Print Head automatically". The nozzle check pattern is printed. This takes about 40 seconds. Check the status of the Print Head. After Print Head cleaning finishes, the nozzle check confirmation screen is displayed. Print the nozzle check pattern to verify that the Print Head nozzles are clean. See Nozzle Check Pattern". Then turn off the machine's power for at least 24 hours, and perform deep cleaning of the Print Head again. 3 If the problem still remains, the Print Head may be damaged. Contact the Canon Customer Care Center. Aligning Print Head automatically If the ruled lines are shifted after running the Print Head maintenance, align the Print Head. A pattern is printed and the Print Head is automatically aligned. It takes about five minutes to finish printing the pattern. Cleaning the Roller Roller Cleaning Clean the paper feed rollers if paper is not fed properly. Cleaning the paper feed rollers will wear the rollers, so perform this only when necessary. The sheet of paper is automatically fed in and then out of the machine. If there are no signs of improvement after performing three times, contact the Canon Customer Care Center. Cleaning the Interior of the Machine Bottom Plate Cleaning This section describes how to clean the interior of the machine. The sheet of paper is automatically fed in and then out of the machine. This section describes about error messages that are displayed on the LCD or Note troubleshooting tips for the problems of copy direct printing. If you cannot find appropriate tips for your problem, refer to the onscreen manuals. You will need to replace a particular part of the machine. Printing under the situation may damage the Print Head. Canon shall not be liable for any machine malfunction or damage caused by refilled ink tanks. Incorrect media type Chapter 11 Action If the ink tank lamp is flashing, ink is empty. Replace the ink tank, and close the Scanning Unit Printer Cover.

The media is loaded with the wrong side facing upwards. The paper stack exceeds the capacity of the Auto Sheet Feeder or Cassette. There is some foreign matter in the Auto Sheet Feeder or Cassette. It may solve the problem. Delete an undesired print job, if there is any. Use Canon IJ Status Monitor in Windows or Printer Setup Utility or Print Center in Macintosh for the deletion. 1. Open the printer properties dialog box. Performing automatic duplex printing When Copying Cause The document is not loaded correctly. The quality Print quality displayed on the LCD is not suitable for the document. The document is not loaded with the side to be copied face down. Follow the steps described below to clean the inside of the machine. 1. Check to see if the paper you are printing on is too thick or curled. "Media types you cannot use" on page Note that smudging may occur at the top and bottom edges of the paper when using Borderless Printing. See page Ensure that the media type selected on the operation panel matches that of the paper loaded. Troubleshooting. The paper is fed and the jammed paper is ejected accordingly. If you cannot remove the jammed paper or the error still persists, contact the Canon Customer Care Center. Troubleshooting. If you cannot remove the jammed paper or the error still persists, contact the Canon Customer Care Center. Action Make sure all required circles on the Photo Index Sheet are filled in, and that the sheet is set in the correct position and orientation on the Platen Glass. The error messages and operations may vary depending on the camera you are using. If you are using a nonCanon PictBridge compatible camera and not sure how to clear the printer error from the camera, confirm the message displayed on the LCD of the machine and clear the error. See The ink tank that was once empty is installed. Replace the ink tank. Printing under the situation may damage the Print Head.

Canon shall not be liable for any machine malfunction or damage caused by refilled ink tanks. If the same error occurs, contact the Canon Customer Care Center. Action When printing through infrared communication, confirm that the infrared. You have a defective Setup CDROM. If you have a defective Setup CDROM, please contact the Canon Troubleshooting Action Reinstall the MP Drivers. ScanGear MP won't start Cause Scanner driver ScanGear MP not installed. Scanner is not selected in the application software. Troubleshooting Action Restart the computer. This may enable the computer to recognize the machine. Action Set the Setup CDROM and install the software. An error message appears and the ScanGear MP window fails to appear. Computer stops operating during scanning Cause Output Resolution set too high. The hard disk does not have enough available space. Parts of image missing or surrounded by extra white areas Cause Scan area was specified larger than the original. Trouble scanning with MultiScan or MultiCrop function Cause The original is positioned outside the supported area. Scanned image enlarged/reduced on the computer monitor. Scanned image won't open. Trouble scanning with MP Navigator Cause The original may not be scanned. MP Drivers is not installed properly. When an Error is Displayed Regarding Automatic Duplex Printing Cause The correct media size is not selected in the printer driver. Error No. 300 is Displayed Cause The machine is not ready. Machine is not properly connected. Once the waste ink absorber becomes completely full, printing cannot be done until the waste ink absorber is replaced. Canon recommends to contact the Canon Customer Care Center as soon as possible. Canon support staff are trained to be able to provide technical support to satisfy customers. Attempts by customers to repair or take apart the machine will invalidate any Canon warranty regardless of whether the warranty has expired.

The actual printable area will be the area without these margins. Read these manuals for detailed information on usage of the machine that is not mentioned in this document, troubleshooting, or usage of the application softwares supplied with the Setup CDROM, etc. If the onscreen manuals have been installed, all of them will be deleted collectively. Print speed may vary depending on system configuration, software, document complexity, print mode and page coverage. Print width Resident print control mode Receive buffer Interface Acoustic noise level Operating environment. Printing on this paper is available only when the Layout function on your camera has a 16up option. "Recommended Paper and Requirements" on page If using a Canon PictBridge compatible camera,

you can select it. Appendix Chapter 12. All rights reserved. Redistribution and use in source and binary forms are permitted provided that the above copyright notice and this paragraph are duplicated in all such forms and that any documentation, advertising materials, and other materials related to such distribution and use acknowledge that the software was developed by the University of California, Berkeley. Information on maintenance and troubleshooting of the Canon Pixma MP500; Part 2 Technical Reference. New technology and technical information such as FAQs Frequently Asked Questions of the Canon Pixma MP 500; Part 3 Appendix. Block diagrams and pin layouts of the Canon Pixma MP500; Reference This manual does not provide sufficient information for disassembly and reassembly procedures. Refer to the graphics in the separate Parts Catalog. All trademarks and copyrights in the published materials belong to their respective owners. Please check your inbox, and if you can't find it, check your spam folder to make sure it didn't end up there. Please also check your spam folder. When changes are made to the contents of the manual, Canon will release technical information when necessary.

When substantial changes are made to the contents of the manual, Canon will issue a revised edition. No parts of this manual may be reproduced in any form or by any means or translated into another language without the written permission of Canon Inc., except in the case of internal business use. Refer to the graphics in the separate Parts Catalog. Ink yield may vary depending on texts and photos printed, application software, print mode, and type of paper used. With some operator call errors, the error is automatically cleared when the error cause is corrected, so the OK button is not necessary to be pressed. Correctly place a disc in the CDR tray and Press the lower left button to open the Then, press the OK button. Install the print head. Install the correct print The paper being printed at error occurrence will be ejected without printing the remaining data for the ejected paper, then printing will resume from the next page. The CD or DVD being printed at error occurrence will be ejected without printing the remaining data for the ejected CD or DVD, then the next print job will be Replace the applicable ink tank with a new one. Install the supported ink tanks. Replace the ink tanks. Data received via wireless Change the paper source. Change one of the settings. The LCD automatically returns to the Insert the card after checking the direction. Set a memory card. Input the number of copies. Specify the print quantity. Set to readonly mode before performing operation. Check the page size you have set. Check the orientation, position and marking. The LCD automatically returns to the display before the error occurrence. Change the Load paper and press Select Yes, and press the OK button. If the waste ink amount is 7% or more, also replace the ink absorber kit when replacing the logic board assy. This page requires Javascript. Modify your browsers settings to allow Javascript to execute. See your browsers documentation for specific instructions.

To install your download click on the name of the downloaded file. Scroll down to see your support options. You can also click one of these links to search our extensive Knowledge Base or visit the Canon Community Forum. Resolutions Optical 1200 x 2400 dpi Interpolated 19,200 x 19,200 dpi Photo print speeds are based on the default mode driver setting using Canon Photo Paper Plus Glossy paper. Print speeds will vary depending on system configuration, interface, software, document complexity, print mode, types of paper used and page coverage. CPM copy speeds based on fast mode setting using plain paper. Bluetooth operation depends on the devices and software version used. The driver may be included in your OS or you may not need a driver. Recommended Drivers File Name Date File Size Optional Drivers File Name Date File Size Recommended Software File Name Date File Size Optional Software File Name Date File Size Recommended Manuals File Name Date File Size Optional Manuals File Name Date File Size Scroll down to easily select items to add to your shopping cart for a faster, easier checkout. Visit the Canon Online Store Perfect for creating any type of Greeting Card with an extensive variety of downloadable templates from the Canon Inc. Glossy finish for impressive photos. Genuine Canon Paper for quality images. An economical choice for great prints. An economical choice for great prints. Package includes 50

sheets. Simply print your photos on the included 2 sided paper, slide the pages easily into the album, and share your memories! Simply print your photos on the included 2 sided paper, slide the pages easily into the album, and share your memories! This paper yields a glossy finish and exceptionally right color, giving your images the look and feel of a traditional photograph. Package includes 120 sheets. This paper yields a glossy finish and exceptionally right color, giving your images the look and feel of a traditional photograph. Package includes 50 sheets.

This paper yields a glossy finish and exceptionally right color, giving your images the look and feel of a traditional photograph. Package includes 20 sheets. This paper yields a glossy finish and exceptionally right color, giving your images the look and feel of a traditional photograph. Includes 20 sheets per pack. Learn about the technology behind the paper. Package includes 20 sheets. Package includes 15 sheets. High quality photos print right onto a sticker sheet, so just peel and stick. 16 stickers per sheet. Photo Paper Plus SemiGloss produces vibrant images with low glare and a soft glossy finish for photo lab quality prints right at home. Photo Paper Plus SemiGloss produces vibrant images with low glare and a soft glossy finish for photo lab quality prints right at home. Photo Paper Plus SemiGloss produces vibrant images with low glare and a soft glossy finish for photo lab quality prints right at home. Photo Paper Plus SemiGloss produces vibrant images with low glare and a soft glossy finish for photo lab quality prints right at home. PIXMA MP500 SERVICE MANUAL Canon Copyright 2005, Canon U.S.A. With regard to the to see the recently added Crown WP3000. Canon PIXMA MP500 Service Manual. Message paging subscribers, for B6100HSTE Dsl 2WD Operators added Crown WP3000. Canon Pixma Mp500 Service Manual download. Replaces Champion J10Y, J11Y, Divide Team. Canon Pixma Mp500 Service Manual from instagram. Operating controls allow for and GEO Replacement Soft signal or switching contacts. Canon Pixma Mp500 Service Manual from facebook. Browse and Read Canon Pixma Mp500 Service Manual Canon Pixma Mp500 Service Manual Its coming again, the new collection that this site has. Repair. Canon Pixma Mp500 Service Manual Canon Pixma Mp500 Service Manual PDF. With regard to the Parts Manual 520B. Check our drill downs Movie Box Office Data.