

car mp3 player instruction manual



File Name: car mp3 player instruction manual.pdf

Size: 3147 KB

Type: PDF, ePub, eBook

Category: Book

Uploaded: 12 May 2019, 20:24 PM

Rating: 4.6/5 from 667 votes.

Status: AVAILABLE

Last checked: 13 Minutes ago!

In order to read or download car mp3 player instruction manual ebook, you need to create a FREE account.

[Download Now!](#)

eBook includes PDF, ePub and Kindle version

[Register a free 1 month Trial Account.](#)

[Download as many books as you like \(Personal use\)](#)

[Cancel the membership at any time if not satisfied.](#)

[Join Over 80000 Happy Readers](#)

Book Descriptions:

We have made it easy for you to find a PDF Ebooks without any digging. And by having access to our ebooks online or by storing it on your computer, you have convenient answers with car mp3 player instruction manual . To get started finding car mp3 player instruction manual , you are right to find our website which has a comprehensive collection of manuals listed.

Our library is the biggest of these that have literally hundreds of thousands of different products represented.



Book Descriptions:

car mp3 player instruction manual

Model Name CA001 Our inhouse technical service team will expedite delivery of your part, If your product needs Adaptor End into your vehicle's cigarette lighter receptacle or power port. Keys operation. Short press "CH" to change the broadcast frequency. Press this button once to return to the previous file. Press and hold to decrease the volume. LED display. Frequency display eg. 106.9MHz. Songs No. display eg. 80. Press this button once to advance to the next file. Press and hold to increase the volume. Press this button once to pause playing music. Press it Operation. Set up If there is an audio distortion, please Using the Audio Input Jack MP4 Player, CD and DVD players, etc. you want to broadcast to modulator. Copy Music from Computer into the Modulator Directly Problem description. How to deal with the problem. Not powered on Red LED stop flash and don't No transmission while power Check if the FM radio's frequency same to the modulator's. Noise Can not be formatted. Connect to PC and find "Removable Disk", have the modulator's Can not copy music into the Specification. Dimension. Weigh. PC connection. Capacity. Power supply. Music format. Operating Current. Bit rate. FM Frequency Range. Channel Switch Operating temperature. Audio Source. Transmitting Distance. Operating System. Accessories Press the CH key to select or use remote control User's Manual, Supplied Cable, USB Cable. Extra 0.5Amp Fuse. Announce as part of our commitment to product excellence. We routinely improves the designs, Because it is impractical to publicize all Operation is subject to the NOTE The manufacturer is not responsible for any radio or TV interference Such modifications NOTE This equipment has been tested and found to comply with the limits for These limits This equipment generates uses and can radiate However, there is no guarantee that interference will not occur in a particular If this equipment does cause harmful interference to radio or television PDF Version 1.6. Linearized No. XMP Toolkit 3.1701. <http://www.scuderieverdina.it/scuderia/userfiles/3zz-fe-manual.xml>

• 1.0.

Producer Acrobat Distiller 7.0 Windows. Creator Tool PScript5.dll Version 5.2. Title. Creator User. Document ID uiddb1c671ce37f44819a11c9b5ff44730a. Instance ID uuid7df172ba1cb84e9e90e67405304dd249. Page Count 5. Author User. Wireless FM Transmitter Digital FM Tuner with LCD Includes 4In1 Car Kit, Micro USB Charging Cable,. Wireless FM Transmitter. Builtin MP3 Player. NA3029. Car Kit MP3 Player FM Transmitter with LCD Display, Black x 1 I have a copy of the Car MP3 Player Manual from the Manufacturer, but it isnt clear how to get. Wireless FM Transmitter. Builtin MP3 Player. NA3029. Instruction Manual 2 Tune your car radio to an FM frequency without a station. 3 Tune. Buy Car Mp3 Player Fm Transmitter Manual from Reliable China Car Mp3 Player Fm Transmitter Manual suppliers. Find Quality Car Mp3 Player Fm Transmitter. This FM transmitter is able to play music files in the MP3 or WMA format on an SD card or USB flash drive, and can also stream music via a 3.5mm cable from an MP3 player, cell phone, tablet or any other device. 1 x Instruction Manual. Like everyone has said, there are no instructions to this product and that is why I could. With a support of FM channels, this Car MP3 wireless FM transmitter lets you take a break from your regular music. USB FM panel Car Mp3 Player FM Transmitter for mp3 radio player Car Mp3 Player FM Transmitter USB SD Card Reader Audio input Music User manual. 1 x Car MP3 Player FM Transmitter Modulator with USB SD Slot, 1 x Remote Control, 1 x Audio Cable, 1 x User Manual, Extra Info. NOTE Please use it 1Buy. The PLFMTR4 is a little MP3 player from Pyle is a perfect addition to your car. Simply plug it in to your cars cigarette lighter. Then, set a station to broadcast. A personal FM transmitter is a lowpower FM radio transmitter that broadcasts a signal from a portable audio device such as an MP3 player to a

standard FM radio.S9D Bluetooth Car Kit MP3 Player FM Transmitter SD MMC USB Handfree Phone Remote.<http://www.thmed.com.br/userfiles/conteudos/3zz-fe-engine-repair-manual.xml>

TuneFreq Digital FM Transmitter, Owners manual Stream audio from your audio player to your car stereo system with this digital FM transmitter that charges. How to set up the Car FM Stereo Transmitter with a portable device and a car is needed to complete any of these steps, refer to the instructions supplied. Bluetooth Wireless FM Transmitter Modulator Car Kit MP3 Player SD USB LCD Remote Package includes 1 x FM Transmitter Bluetooth Car MP3 Player. The answer to your problem is buying a Car FM Transmitter. The small package contains the FM Transmitter itself, a 3.5mm audio cable, an instruction manual and a So, if you don't have an MP3 player or bluetooth audio on your radio we. Premium InCar Bluetooth FM Transmitter favorite music from your Smartphone or portable media player to your car stereo. AutoSeek, Manual adjustment. Browse our inventory. Featured Instructions Car MP3 Player FM Transmitter USB. Min. Order 30 Pieces Compatible with most audio devices such. GPS devices, Smartphones, Mobile Phones. CR150, Car MP3 CR225, FM Transmitter with Bluetooth and Microphone. WT601N, Wireless. Learn how we and our ad partner Google, collect and use data. Can I order a sample 9 how fast can i get it 9 Yes, usually we have sample in stock, even without, processing time will be around 34 days 2. What your shipping way for sample order 9 Usually we ship by DHL or UPS and FedEx 3. We shall let you know about the shipping cost after receipt of your order. Please pack the merchandise safely so it reaches us in the same condition it reached you. Updated daily. Updated daily. A wide variety of user manual car mp3 player options are available to you, such as yes, no. You can also choose from ce, bq, and rohs user manual car mp3 player, as well as from usb user manual car mp3 player, and whether user manual car mp3 player is bluetooth enabled, radio tuner, or cd player. There are 452 suppliers who sell user manual car mp3 player on Alibaba.com, mainly located in Asia.

The top countries of supplier is China, from which the percentage of user manual car mp3 player supply is 100% respectively. Please pack the merchandise safely so it reaches us in the same condition it reached you. Updated daily. Updated daily. A wide variety of user manual car mp3 player for fm transmitter options are available to you, such as yes, no. You can also choose from bq, ce user manual car mp3 player for fm transmitter, as well as from usb user manual car mp3 player for fm transmitter, and whether user manual car mp3 player for fm transmitter is bluetooth enabled, cd player, or radio tuner. There are 119 suppliers who sell user manual car mp3 player for fm transmitter on Alibaba.com, mainly located in Asia. The top countries of supplier is China, from which the percentage of user manual car mp3 player for fm transmitter supply is 100% respectively. Niewłasciwe polaczenie moze spowodowac uszkodzenie urzadzenia lub systemu elektrycznego pojazdu. Pamietaj, aby glosnik byl podlaczony do terminalu glosnika . Uwazaj, aby przewody glosnika lewego i prawego nie stykaly sie ze soba ani z korpusem samochodu. Po zakonczeniu podlaczania i uruchomieniu urzadzenia a takze po wymianie akumulatora naciśnij przycisk RESET na przednim panelu przy uzyciu ostro zakonczzonego przedmiotu np. Uwaga Przed uzyciem urzadzenia nalezy usunac wkret zabezpieczajacy A. Instrukcja obsługi Uwaga. Przycisk Reset 8. Funkcja AMS 20. Dioda LED 10. Zmiana glosnosci 21. Gniazdo karty pamieci 11. Nalezy umiescic kciuk w poblizu przycisku miedzy A i B oraz drugi palec na falistym przycisku zwolnienia z tylu przedniego panelu. Aby zalozyc panel, nalezy wsunac i zatrzasnac go w metalowej ramce. Naciśnij VOL, aby zmniejszyc glosnosc. Przyciski numeryczne Przyciski numeryczne pomagaja w zapisaniu ulubionych stacji radiowych przez naciśnienie jednego z nich. Teraz stacja jest zapisana pod odpowiednim numerem przycisku. Na wyswietlaczu pojawia sie FM1, FM2, FM3, AM1, AM2, zaleznie od wyboru.

Dostępne sa trzy pasma FM. Wyswietlacz pokaze DSP, sekwencja wyboru jest nastepujaca INT Naciśnij INT, aby odtworzyc pierwsze 10 sekund kazdej sciezki. RPT Naciśnij RPT, aby wlaczyc funkcje powtarzania. STOP Naciśnij ten przycisk w celu zatrzymania odtwarzania. RDM Naciśnij ten przycisk w celu wlaczenia funkcji losowego odtwarzania sciezek. Przycisk Reset Przy pierwszym

uzyciu lub po wymianie akumulatora należy zresetować urządzenie. Nacisnij przycisk 7 RESET ostrym przedmiotem np. Dioda LED Gniazdo kart pamięci Służy do umieszczania karty pamięci SD. Funkcja RDS Radio Data System RDS jest usługą stacji radiowych. Nacisnij i przytrzymaj przycisk SEL, aby włączyć tryb RDS. Gdy tryb RDS jest włączony, na wyświetlaczu pojawia się symbol AF. Gdy odbierana jest stacja, na wyświetlaczu pojawia się nazwa programu i inne informacje. Informacje zależą od stacji radiowej. Instrukcja obsługi 8 PS Usługa nazwy programu Dzięki tej usłudze wyświetlana jest nazwa stacji. AF Alternatywne częstotliwości Radio automatycznie wybiera alternatywną częstotliwość tego samego programu o najlepszym odbiorze. TA Informacje o ruchu drogowym PTY Kod typu programu Przy użyciu typu programu odbiornik może wyszukiwać stacje nadające wybrane treści, np. Podczas odtwarzania MP3 Pierwsze naciśnięcie RPT włącza powtarzanie utworu. Na wyświetlaczu pojawia się napis RPT. Ponowne naciśnięcie RPT włącza funkcję powtarzania. Podczas odtwarzania MP3. Pierwsze naciśnięcie RPT włącza powtarzanie utworu. Automatyczne skanowanie ścieżek Podczas odtwarzania należy nacisnąć przycisk INT w celu odtworzenia pierwszych 10 sekund każdego utworu na płycie, na wyświetlaczu pojawi się napis INT, wskazujący na włączenie funkcji. Ponowne naciśnięcie przycisku INT przywraca normalne odtwarzanie. Na wyświetlaczu pojawi się napis INT OFF. Losowe odtwarzanie ścieżek Nacisnij przycisk RDM podczas odtwarzania, na wyświetlaczu pojawi się napis RDM, wskazujący na włączenie funkcji. Urządzenie będzie losowo odtwarzać utwory.

Zatrzymanie odtwarzania Podczas odtwarzania nacisnij STOP na pilocie w celu zatrzymania, na wyświetlaczu pojawi się napis STOP. W celu powrotu do normalnego trybu nacisnij PLAY. Uwaga W trybie MP3 nacisnij STOP na pilocie, aby zatrzymać odtwarzanie. Na wyświetlaczu pojawi się STOP. Pauza Podczas odtwarzania nacisnij przycisk PAUSE, aby wstrzymać odtwarzanie. Uwaga Można też nacisnąć przycisk PAUSE, aby wznowić odtwarzanie po zatrzymaniu. Przycisk OPEN służy do wyjęcia płyty. Funkcji tej nie należy używać w trybie wstrzymania, lecz dopiero po wyłączeniu wstrzymania. W przypadku uszkodzenia wymień ją na nową. Przed założeniem baterii należy sprawdzić jej polaryzację. 1. Wyciągnij uchwyt baterii, naciskając blokadę 1. Wyświetlanie i ustawianie czasu Wyświetlanie czasu Aktualny czas jest wyświetlany po naciśnięciu przycisku DISP. Następnie nacisnij DISP w celu potwierdzenia lub poczekaj 3 sekundy na automatyczne potwierdzenie. Brak odbioru stacji radiowych. Nie można włożyć płyty. Nacisnij przycisk RESET. Sprawdź, czy antena jest zainstalowana i prawidłowo podłączona. Antena może mieć niedostateczną długość. Sprawdź, czy jest do końca wyciągnięta lub czy nie jest uszkodzona. Zbyt słaby sygnał. Antena jest źle uziemiona w miejscu instalacji. Dział Obsługi Klienta tel lub od poniedziałku do piątku w godz Producent zastrzega sobie możliwość wprowadzenia zmian w specyfikacji produktu bez uprzedzenia. Made in P.R.C. FOR MANTA EUROPE Tylko w ten sposób możliwe jest bezpieczne i skuteczne korzystanie ze wszystkich To use this website, you must agree to our Privacy Policy, including cookie policy. Our payment security system encrypts your information during transmission. We don't share your credit card details with thirdparty sellers, and we don't sell your information to others. Please try again.No Cost EMI availableNo customer signatures are required at the time of delivery. To pay by cash, place cash on top of the delivery box and step back.

Order delivery tracking to your doorstep is available.In order to navigate out of this carousel please use your heading shortcut key to navigate to the next or previous heading. Please try your search again later.You can edit your question or post anyway.Amazon calculates a products star ratings based on a machine learned model instead of a raw data average. The model takes into account factors including the age of a rating, whether the ratings are from verified purchasers and factors that establish reviewer trustworthiness. Learn more at privacy policy. Price RUB 1,950 rub. You have 2 weeks to request refund — up to 84 days. Product doesn't match the description. Contact us within 30 days after you receive it. In case of cancellation, money will be refunded to your account within 14 days. Similar items 33% Price RUB 1,763 rub. 508 Bluetooth Car Stereo MP3 Player AUX USB Audio Copy Radio Head Unit 36% Price RUB 1,557 rub. 508 Bluetooth Car Stereo MP3 Player

AUX USB Audio Copy Radio Head Unit 38% Price RUB 1,571 rub. 508 Bluetooth Car Stereo MP3 Player AUX USB Audio Copy Radio Head Unit 38% Price RUB 1,573 rub. 508 Bluetooth Car Stereo MP3 Player AUX USB Audio Copy Radio Head Unit 40% Price RUB 1,579 rub. 508 Bluetooth Car Stereo MP3 Player AUX USB Audio Copy Radio Head Unit 82% Price RUB 335 rub. 12V MP3 Decoder Board Audio Module USB TF Radio for Car Accessories 65% Price RUB 411 rub. Car Stereo In Dash Bluetooth MP3 Player Aux Input USB FM Radio Receiver 72% Price RUB 517 rub. Wireless Bluetooth MP3 Player Decoder Board HandsFree Car Remote Control FM Radio Module USB AUX AD 71% Price RUB 466 rub. 1Set 712V Car Bluetooth MP3 Decoder Board Decoding Player Module Support FM Radio USB TF LCD Screen Remote Controller 39% Price RUB 1,439 rub. SWM503 Car Radio TF U Disk AUX Bluetooth Auto Stereo MP3 Player Head Unit Price RUB 408 rub. JSD520 12V Car Mp3 Player Radio Multimedia Car Stereo Player With Fm Function 22% Price RUB 3,035 rub.

7010B 2 Din Car Video Player Dvd 7 Inch Lcd Touch Screen Bluetooth Fm Radio Mp5 Player 33% Price RUB 380 rub. Wireless Bluetooth Mp3 Car Decoder Board Audio Module 512V Usb Tf Radio 59% Price RUB 383 rub. Car Audio USB TF SD FM AUX MP3 WMA Decoder Board Module 39% Price RUB 256 rub. TMC T10 50506SMD RGB LED Auto Car Show Wide Light License Plate Reading Lamp 59% Price RUB 751 rub. DC 12V Bluetooth 4.0 Audio APE FLAC WAV WMA MP3 Decoder Board FM Radio 55% Price RUB 740 rub. 2pcs TF Car FM MP3 Decoder Board Digital LED Audio Remote Control 21% Price RUB 3,948 rub. 7 Car 2 Din MP5 Player Bluetooth Stereo Radio FM with Touch Screen 7023B 37% Price RUB 217 rub. 2x RGB Remote Control Car LED Light T10 5050 6SMD Colorful Side Light License Plate Light 48% Price RUB 311 rub. 4 X T10 6SMD 5050 RGBW LED Car Interior Reading Lights Super Bright 16 Color Changing Width Lamp Wedge Side Light With Wireless Remote Control Price RUB 770 rub. EZP2019 High Speed USB SPI Programmer Support 24 25 93 EEPROM Flash Bios from Forest 64% Price RUB 686 rub. The level will be shown as "VOLUME xx" on the display panel. Turn button left to decrease the volume level. After 5 seconds the display will return to the previous mode. STARTUP VOLUME LEVEL SET UP Startup volume is the volume level the set will play at when next turned on. To adjust the startup volume, press and hold button. Turn button left or right to increase or decrease the volume, then press button. Note When the EQ mode is activated, the BASS, MIDDLE, TREBLE and LOUD modes are not displayed. BASS CONTROL 1st setting To adjust the bass tone level, first select the bass mode by pressing button. Within 5 seconds of selecting the BASS mode, turn button. The display will automatically return to the normal indication in 5 seconds after the last adjustment, or when another function is activated. MIDDLE CONTROL 2nd setting To adjust the mid tone level, first select the middle mode by pressing button.

Within 5 seconds of selecting the middle mode, turn button. The display will automatically return to the normal indication in 5 seconds after the last adjustment or, when another function is activated. TREBLE CONTROL 3rd setting To adjust the treble tone level, first select the treble mode by pressing button. Within 5 seconds of selecting the treble mode, turn button. The display will automatically return to the normal indication in 5 seconds after the last adjustment, or when another function is activated. 5 GENERAL BALANCE CONTROL 4th setting To adjust the left/right speaker balance, first select the Balance mode by pressing the Select button. The balance position will be shown by the bars on the display panel from "BAL 10L" full left to "BAL 10R" full right. The display will automatically return to the normal indication in 5 seconds after the last adjustment or when another function is activated. FADER CONTROL 5th setting To adjust the front/rear speaker balance, first select the Fader mode by pressing the Select button. The fader position will be shown by the bars on the display panel from "FADER 10F" full front to "FADER 10R" full rear. The display will automatically return to the normal indication in 5 seconds after the last adjustment or when another function is activated. 6 GENERAL BEEP CONTROL 6th setting To adjust the Beep mode, first select the Beep mode by pressing the Select button. The Beep mode will be shown on the display panel from "BEEP 2ND", "BEEP OFF" and "BEEP ON". The display will automatically return

to the normal indication in 5 seconds after the last adjustment or when another function is activated. Select "BEEP ON" when you wish to hear the "BEEP" sound whenever any function button is pressed. Once the desired setting is displayed, press button. This action will compensate for the reduction in bass and treble performance experienced at low volume. JAZZ Press EQ button.

In local sensitivity mode, the radio will select only local strong stations in station search mode. In distant sensitivity mode, the radio will select strong local stations and weaker distant stations in station search mode. When in local sensitivity mode, the display panel shows LOC in smaller characters constantly at the top of the LCD display. To change the sensitivity mode between local and distant mode, press button . Note If the desired radio station is not found during station search in either local or distant mode, try manually tuning to the frequency of the desired station by turning button .

WARNING LED This LED lamp blinks every 1 second when the ignition is turned OFF.

8 ANTITHEFT SECURITY PIN CODE. ANTITHEFT SECURITY PIN CODE INPUT To activate the security pin code code, please follow these steps. 1. Turn on your stereo. 2. If the stereo screen indicates "1 CDE", this is a message that you need enter your antitheft security pin code. 3. Your security pin code number can be found on the card supplied with your new KIA vehicle. 4. Every KIA stereo has its own individual antitheft security pin code. Entering an incorrect pin code or using incorrect procedures will not activate your stereo to an operational status. 5. Your antitheft p pin code is made up of four computergenerated p g numbers. 6. An example pin code may be 3212. 7. To enter pin code 3212 into your stereo, always follow these steps, a. Press Preset 1 button. Your Stereo is now readied for full operation. 9

ANTITHEFT SECURITY PIN CODE 8. Another example pin code number is 7963. 9. To enter pin code 7963 into your stereo, always follow these steps, a. Press Preset 1 button. This means you need enter the pin code a second time taking care to follow these instructions and enter the correct pin code. 11. If the stereo screen show the message "3 CDE", this means you failed to follow the correct instructions or that you entered the incorrect pin code. 12.

If you fail to succeed to enter the correct pin code at the third attempt, your stereo will turn off. You will need to wait at least one hour before attempting to reenter the correct antitheft security pin code number using the above procedures correctly. The only time your stereo will identify the message "1 CDE" in the screen is if your stereo or car has lost battery power. If your car battery is in good order, your stereo will accept your antitheft security pin code number using the above procedure. If you experience a failure to operate your stereo after carrying out the above procedure. Please visit a KIA Dealer for additional assistance. Each time this button is pressed, LCD displays each band as follows , or DOWN TUNE SEEK To automatically select a radio station, momentarily press the UP TUNE SEEK button . The tuner will search for the next radio station. **MANUAL TUNING** To manually tune to a radio station, turn button. The unit will stop at each preset station the preset number on the display panel will flash during preset scan operation and remain on the selected frequency. Press the button momentarily again to remain on the station currently being heard. 2 **BEST STATION MEMORY BSM** Pressing BSM button. If you have already set the preset memories to your favorite stations, activating the BSM tuning feature will erase those stations and enter the new ones. To store radio stations into any of the 6 preset memories, in either the AM or FM bands, use the following procedure a. Select the desired radio band by pressing momentarily MODE button . b. Select the radio station to be preset using the manual or automatic tuning methods described earlier. c. Press and hold any of the preset buttons for longer than 3 seconds. The preset number will appear on the display panel indicating that the radio station is now set into that preset memory location.

Note In case of playing MP3 disc, you can search the file using cue and review, but the MP3 track audio will not be heard. Press and hold button. Then, turn button right or left to display the available

directories. Press button momentarily when the desired directory is displayed, then turn button. Press button when the desired file is displayed to begin playback. 13 CD PLAYER The Directory reading method is different as follows depending on the burning software like Easy CD or Nero Burning. The unit will then play that selected file. For example, the file search changes in Dir01 as follows. Press the button again. TRACK SCAN SCN During disc play, press button. When the desired track is reached, press button. The set will then play the selected track. Note When scan playing an MP3 disc, press and hold button. Repeat Play mode will also be cancelled by activating random play or scan play button. Note In case of playing MP3 disc, when button. The playback will be repeated until the directory repeat mode is cancelled by pressing the repeat button again, or by activating random play or scan play button. "RPT" will then disappear from the display. RANDOM PLAY SELECTOR RDM During disc play, press button. The track select function. The random play mode can be cancelled by activating scan play or repeat play button. Note In case of MP3 playback; when the random button is pressed and held longer than 3 seconds, "RDM" will blink on the display panel and play all files in the current directory randomly until the directory random mode is cancelled by pressing button. CD PLAYER ID3 v2 DISP Button. Each time button is pressed, the display changes to show the information shown at right. DISC EJECT By pressing DISC EJECT button, the disc will be ejected and the set will return to the previous mode. Note When in case of Eject Error, press the Eject button for more than 5 seconds. The CD will force eject.

DISC SLOT With the printed label surface facing up, gently insert the disc into the slot until the soft loading mechanism engages. The display panel will show "READING" and then disc playback will commence. Please observe these guidelines to take care of your compact discs. Fingerprints, dust and dirt should be carefully wiped off the discs playing surface shiny side with a soft cloth. Wipe in a straight motion from the inside to the outside of the disc. Never use chemicals such as record sprays, household cleaners or thinner to clean compact discs. Such chemicals can irreparably damage the discs surface. Discs should be kept in their storage cases when not in use. Do not expose discs to direct sunlight, high temperatures or high humidity for extended periods. Do not stick paper, tape, or labels on the disc surfaces nor write on them with any type of marker. 2 Discs with nonstandard shapes e.g. heart, square, star cannot be played on this unit. Attempting to do so may damage the unit. Do not use such discs. 3 Before playing, clean the discs with a commercially available cleaning cloth. Wipe each disc from the center out. ERROR 2 MECHANISM Mechanism problem. ERROR 3 FAULT Mechanism fault. ERROR 4 SERVO Servo error. Failure of this product due to misuse or abuse will not be repaired under warranty. This guarantee does not cover any call for warranty service or change over product service if it is recognized that your complaint is caused by your use of damaged, faulty CDs or imperfect CD-R and CD-RW discs. Most MP3 files are created on a personal computer using special software. Additional text information such as track TITLE, ARTIST and ALBUM included in the audio track can be displayed on the car audio set. Sound quality of MP3 files varies depending on the settings used when the file was created. Your KIA car audio set plays most MP3 files. This car audio set plays compact discs containing WMA files.

WMA is an abbreviation of Windows Media Audio, an audio format developed by Microsoft Corporation. WMA is similar to MP3 with respect to size, sound quality and text display. WMA files are created using the Windows Media Player on a personal computer. Your KIA audio set plays most WMA files. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment. 2 PRECAUTIONS When the inside of the car is very cold and the player is used soon after switching on the heater moisture may

form on the disc or the optical parts of the player and proper playback may not be possible. We are a nonprofit group that run this service to share documents. We need your help to maintenance and improve this website.