



File Name: comelit powercom user manual.pdf

Size: 4307 KB

Type: PDF, ePub, eBook

Category: Book

Uploaded: 22 May 2019, 20:23 PM

Rating: 4.6/5 from 614 votes.

Status: AVAILABLE

Last checked: 18 Minutes ago!

In order to read or download comelit powercom user manual ebook, you need to create a FREE account.

[Download Now!](#)

eBook includes PDF, ePub and Kindle version

[Register a free 1 month Trial Account.](#)

[Download as many books as you like \(Personal use\)](#)

[Cancel the membership at any time if not satisfied.](#)

[Join Over 80000 Happy Readers](#)

Book Descriptions:

We have made it easy for you to find a PDF Ebooks without any digging. And by having access to our ebooks online or by storing it on your computer, you have convenient answers with comelit powercom user manual . To get started finding comelit powercom user manual , you are right to find our website which has a comprehensive collection of manuals listed.

Our library is the biggest of these that have literally hundreds of thousands of different products represented.



Book Descriptions:

comelit powercom user manual

Page Count 4 Wiring Shielded CAT5 Reset Button GSM LED Installing SIM card Before installing SIM card, switch OFF POWER, ensure that the card has been registered, activated, and has some calling credit. Check it works in a mobile phone first. IMPORTANT The SIM card holder is FRAGILE. Do NOT force. Do NOT use a screwdriver. WARNING Installing or removing the SIM card without first switching off the power will cause damage to this unit. Please allow 2030 seconds for the unit to boot up and detect the network. Once successful connection has been made, the unit will sound a confirmation tone and the status LED will begin flashing. If there is a fault or problem, the unit will emit a series of bleeps or warning tones. This stops the unit ringing a number after a set time, and can be used to prevent voicemail answering the call. Send the following SMS. The unit can allow up to 100 telephone numbers to be stored, for users to be able to ring the system for automatic entry. This uses caller ID like a phone to determine the identity of the caller. When a recognised number calls the unit, it will trigger output 1 or 2 and hang up without answering the call. First, the unit must know what country it is operating in. 1 Program the country code as follows. 2 Program the numbers you wish the unit to dial when the call button is pressed, up to a maximum of 3 numbers. The pass code only needs to be put at the beginning of each new message. 2 Enter the telephone numbers required to have access control. Do not enter country code, just the complete number as you would dial it, as follows. Where can be 13 digits long. For USA, enter 1 as the country code. For UK, enter 44 and so on. Do not use any leading zeros. Note If using more than 1 button panels, further dialling out numbers can be programmed as follows. Caller ID access control Programming Programming telephone number 987654321 to have access by caller ID. <http://clap-bas.com/userfiles/carburetor-tuning-manual.xml>

• 1.0.

Solid core of shield connected to 0V on PCB above for better audio quality. WARNING Do NOT use 24v ac. Status LED Relay 2 Press 7 Momentary 8 Latch 9 Unlatch Antenna connector. Finger tighten only! 1 First check reception. Where will be between 1 and 31 Below 14 can cause problems with relay operation, or no voice from the gate to the house. Take action to improve reception. 112 Poor 1320 Medium 2131 Good Programming is carried out by sending SMS texts to the unit. If it does, then disable the PIN code request. Check the SIM is a standard GSM SIM, not 3G or 4G only SIM. If you are unsure, contact your SIM card provider to verify. Poor reception is not sufficient. Check the antenna has been mounted as high as possible, not near large metal objects, or wet green shrubs etc. Check the antenna connection. Visually inspect that the centre pin inside the antenna is intact, and has not been pushed back inside the fitting. Q. The unit calls the first number, but there is not enough time to answer before it diverts to the next number. A. Increase the no answer time as per programming instructions. Q. The unit calls the first number but voicemail comes on before it can ring the second number. A. Decrease the no answer time as per programming instructions. Q. The caller ID part does not work. A. Be sure to program the caller ID part under 72 feature. This may also be caused by either a defective microphone, or incorrect microphone wiring, or a short circuit by whiskers between the centre core and the shielding, or excessive microphone cable length. Q. The audio quality that can be heard on the remote telephone is poor or humming buzzing. A. This can be caused by excessive cable length on the microphone cable, or by not using screened microphone cable, or by installing the GSM antenna lower than the height of the speech panel. If non of the above work, try earthing the speech panel chassis to 0V of the power supply. This is also a symptom of poor

reception. <http://famous-celebrity-autographs.com/userfiles/cardale-autoglide-manual.xml>

If it can be heard, then the system is working, check wiring between the relays and the lock or gate panel. If the relays do not make a clicking sound, then check this feature on a different mobile cell phone or landline. If it works on a different phone, check the settings on the phone in question under DTMF tones. Failure of DTMF tones to operate correctly is also a symptom of low reception. Check steps above on improving reception. All of the features shown on the Android app are also available for non Android users, or non smart phone users. Unit will reply with list of stored numbers. This allows you to register the SIM card on their web site, and create a payment method. When the credit runs low, the network will automatically top up your SIM card, so that you don't have to worry about running out. Contact your network provider in your country for more information or register with them online. Entering a new user code. 1 Press 0 then E. Check that the red LED is lit. 2 Enter in the programmers code, then press E. 3 Enter the relay ID number 1 or 2, then press E. 4 Enter 0 for latching relay, or 199 for pulse relay time, then press E. 5 Enter the new code, followed by E. 6 The LED should not turn off. NOTE If you make an error, press the button with the KEY symbol several times to cancel and start again. Fault finding and FAQ's Q. The unit will not power up. No LEDs on. A. Check power supply voltage is between 1215v dc at the modem. Q. The unit powers up but there is a bleeping from the door station. A. This means the unit is not able to detect the network for some reason. Check the SIM card is activated and has calling credit. Power off the unit, remove the SIM and check it in a mobile phone to verify it can make a call. Check the SIM does not ask for a PIN code when put in a phone. If it does, then disable the PIN code request. Check the SIM is a standard GSM SIM, not 3G or 4G only SIM. Poor reception is not sufficient.

Check the antenna has been mounted as high as possible, not near large metal objects, or wet green shrubs etc. Fit an externally mounted high gain larger antenna. Q. The unit calls the first number, but there is not enough time to answer before it diverts to the next number. A. Increase the no answer time as per programming instructions. Q. The unit calls the first number but voicemail comes on before it can ring the second number. A. Decrease the no answer time as per programming instructions. Q. The caller ID part does not work. A. Be sure to program the caller ID part under 71 feature. Check steps above on improving reception. There are several modes of operation depending on how the unit has been programmed by your installer. The following instructions will assume default programming. The intercom will end the call for you. Option 2 If your number is not saved in the intercom memory, it will answer the call. Enter the code on your telephone keypad to activate the door or gate default code 5678 shown. The app allows easy advanced control of the intercom and gates or door by the simple press of the buttons shown. The app will need configured with the SIM card phone number of your intercom before it can be used. Once the app is installed, pressing the MENU button on your phone will display the setting screen below, where you can enter the SIM card phone number. If your gate system is set for timed operation where it automatically closes after a preset delay, you may be able to take advantage of the latching features. Since opening our doors for business, we have built up an enviable reputation for providing the professional installation and maintenance of security systems throughout London and Essex. Something went wrong. Sell on eBay Sell Other Home Security User Agreement, Privacy, Cookies and AdChoice Norton Secured powered by Verisign.

<http://www.raumboerse-luzern.ch/mieten/bosch-nexxt-800-series-washer-manual>

Simply search through the pictures to find your No infringement of copyright is expressed or So for all your security South West London, SW2 Brixton, Tulse. Fully key resettable red manual fire call point which offers almost all commonly used switch monitoring Examples of There is a builtin audio prompt when a card is It can be setup and administered The power supply supports two It has a builtin 12 Volt DC power supply unit. The ACTpro In turn up to 250 ACTpro 4000s may be networked via a In turn up to 250 ACTpro 4000s may be networked via a It can be mounted on a

single gang electrical back box using The functionality available to each user is The functionality available to each user is Keypad backlighting enhances functionality at night The ACT 10 digital keypad is used to facilitate access Keypad backlighting enhances functionality at night or in It facilitates access It connects to any 37Bit Wiegand and Clock Available as It comes in a compact desktop form With the added advantage of a 2 There is a builtin audio prompt when a card is With the added advantage of a 2 Plastic holder for cards. Attach to lanyard or clip. With their clean, attractive lines, the modular elements guarantee optimal results by offering Comelits innovative Maestro video monitor is the perfect marriage of style and functionality. The Easycom wallmounted dooreentry phone from Comelit is a highlyevolved product, as it occupies a minimal amount of space The unit can store up to 20 numbers and any of these numbers can call the unit.

<http://www.audaxdemolizioni.com/images/bunn-ultra-2-frozen-drink-machine-manual.pdf>

<http://atonenergia.com/images/bunn-tiger-service-manual.pdf>

<http://schlammatlas.de/en/node/17507>