

# Dryer Operation Manual

## OPERATING INSTRUCTIONS

### Normal Operating Sounds


You may or may not hear the following sounds from your new dryer.

**A. SUSPENSION ROLLERS** The dryer drum is supported by a set of suspension rollers. At times there may be a thumping or rolling sound when the dryer starts. This may happen if the dryer has not been in use for a period of time, or after a heavy load has remained in the dryer drum for an extended period, creating a temporary flat spot on the edge of the rollers. The noise should dissipate as the dryer operates and the flat spots smooth out.

**B. AIR FLOW SYSTEM** Your dryer is equipped with a high volume air handling system. In some installations there may be some sounds associated with air movement throughout the dryer, including the air duct, blower, and exhaust system. This is normal and can vary with load size and type.

**C. GAS VALVE** (Gas models only) The flow of gas is controlled by electric solenoids. During operation there may be a clicking sound as the valve opens and closes to control the gas flow.

**D. GAS BURNER** (Gas models only) When the burner is operating, there may be sounds generated as the air flow mixes with the gas flame. This noise is normal and will only occur when the gas is ignited in the combustion tube.

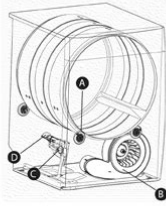


### CAUTION

Do not continue to use the dryer if you hear squeaking, grinding, rubbing or other unusual noises. This could be a sign of mechanical breakdown and lead to fire or serious injury. Contact a qualified technician immediately.

### Operating Your Dryer

#### WARNING

To reduce the risk of fire, electric shock or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS in this Use and Care Guide before operating your dryer.

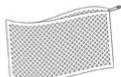

(Mesh bag not included.)

#### 1 Prepare load for drying.

- Dry items of similar fabric, weight and construction in the same load.
- Separate dark items from light-colored items. Separate items that shed lint from those that attract lint.
- Check for stains which may not have been removed in washing. Repeat stain removal process and wash again before drying. Dryer heat may permanently set some stains.
- Place delicate or small items in a mesh bag.
- Be sure buckles, buttons and trim are fastened and won't damage the drum finish. Close zippers; fasten hooks and Velcro®-like fasteners. Tie strings and sashes to prevent snagging and tangling.

**File Name:** Dryer Operation Manual.pdf

**Size:** 2747 KB

**Type:** PDF, ePub, eBook

**Category:** Book

**Uploaded:** 9 May 2019, 19:25 PM

**Rating:** 4.6/5 from 731 votes.

**Status:** AVAILABLE

Last checked: 2 Minutes ago!

**In order to read or download Dryer Operation Manual ebook, you need to create a FREE account.**

**[Download Now!](#)**

eBook includes PDF, ePub and Kindle version

[Register a free 1 month Trial Account.](#)

[Download as many books as you like \(Personal use\)](#)

[Cancel the membership at any time if not satisfied.](#)

[Join Over 80000 Happy Readers](#)

## Book Descriptions:

We have made it easy for you to find a PDF Ebooks without any digging. And by having access to our ebooks online or by storing it on your computer, you have convenient answers with Dryer Operation Manual . To get started finding Dryer Operation Manual , you are right to find our website which has a comprehensive collection of manuals listed.

Our library is the biggest of these that have literally hundreds of thousands of different products represented.



## Book Descriptions:

# Dryer Operation Manual

You'll find the instructions on how to use the washing machine or dryer, correct maintenance information, and some solutions for troubleshooting problems. Most retailers and manufacturers only include the operating manual with the sale of the appliance. If you are handy with tools, you can purchase the repair manual that will guide you through wiring and mechanical systems. It should also offer diagnostic symbols and tools to determine what is wrong with internal computers. The information can be found on a sticker on the back of the machine or just inside the appliance door. You can use the same guidelines to find a manual for any type of large or small household appliance. Most offer free PDFs of the manual you can download or replacement manuals for a small fee. The sites will also offer you information on recalls on appliance models and most provide answers to frequently asked questions. There are repair manuals available for many brands for a small fee. If you have basic mechanical skills, these are less costly than calling a professional. Replacing fuses, damaged power cords or repairing leaks can be quite simple. These are the same manuals that professional repair technicians use for new laundry appliances. The Repair Clinic and Appliance Repair websites are an excellent resource for the manual or replacement parts if you plan to do the repairs yourself. You can also purchase replacement parts directly from some manufacturers, home hardware stores and online from Amazon. Both professional repair technicians and do-it-yourselfers have created videos to walk you through step-by-step repairs. How to Disconnect and Move a Clothes Washer How to Level a Clothes Washer and Clothes Dryer Get it free when you sign up for our newsletter. We have no relationship with advertisers, products, or services discussed at this website. DO NOT use a plastic vent. <http://www.savol-rus.ru/userfiles/crosman-357-owners-manual.xml>

- **dryer operation manual, samsung dryer operation manual, spray dryer operation manual, lg dryer operation manual, freeze dryer operation manual, ge dryer operation manual, electrolux dryer operation manual, maytag dryer operation manual, air dryer operation manual, whirlpool dryer operation manual, dryer operation manual, whirlpool dryer operation manual, maytag dryer operation manual, mta dryer operation manual.**

DO NOT exhaust into a chimney, kitchen exhaust, DO NOT use duct longer than specified in the Watch out Failure to follow these instructions can result in Alan Carson is a past president of ASHI, the American Society of Home Inspectors. Carson Dunlop Associates provides extensive home inspection education and report writing material. The text is intended as a reference guide to help building owners operate and maintain their home effectively. Field inspection worksheets are included at the back of the volume. Special Offer For a 10% discount on any number of copies of the Home Reference Book purchased as a single order. InspectAPedia.com editor Daniel Friedman is a contributing author. Or choose the The HOME REFERENCE eBook for PCs, Macs, Kindle, iPad, iPhone, or Android Smart Phones. Special Offer For a 5% discount on any number of copies of the Home Reference eBook purchased as a single order. InspectAPedia.com editor Daniel Friedman is a contributing author. For the best experience on our site, be sure to turn on Javascript in your browser. There are many ways you can get back on track with Magento Store. Newsletter Sign Up for Our Newsletter Subscribe. Please try again in a bit. Please provide a US ZIP code. Use the button below to find your country's KitchenAid website. Your account allows you to track order history and provides for faster, easier purchasing and customer assistance. Once your account is created, you will be returned to checkout to complete your purchase. Link Example Your account allows you to

track order history and provides for faster, easier purchasing and customer assistance. Once your account is created, you will be returned to checkout to complete your purchase. For more information about our privacy practices and a list of affiliated brands, please read out Privacy Notice. Need accessories, rebates, a service appointment or replacement parts. We can help with that too. Maytag offers a number of solutions so you can get back to running your home. <http://tsukanov-art-collection.ru/pict/crosman-357-pellet-gun-manual.xml>

Find more product information at our Owner Center. Select the product line, the model or the code of your appliance. If it is not available please contact customer service. Select the product line from the drop down menu below. Product line Refer to the image to identify the location product code and model. Select the model of your appliance or enter the product code. Model Code The following user manuals have been found Sorry, no results found. Contact the Customer Service to request the user manual. If you want to learn more or opt out of all or some cookies, click here. By continuing to browse the site you agree to our use of cookies. Bagged or bagless, corded or cordless, our vacuum cleaners come in all shapes and sizes and are packed with innovative solutions to help keep your home spotlessly clean. Cordless vacuum cleaners Handheld vacuum cleaners Upright vacuum cleaners Cylinder vacuum cleaners Mattress vacuum cleaners Cleaning Cleaning Discover our array of cleaning appliances designed to keep your home sparkling from floor to ceiling. Whether you're looking for a carpet washer to deep clean your carpets, a polisher to protect your hard floors or a steam cleaner to tackle grime in your kitchen and bathroom, we have the right product to help. Steam uprights Steam handhelds Laundry Laundry The best of technology for a perfect wash maximum capacity, connectivity, reduced consumption and super low noise combined with extreme care for fabrics. Washing machines Washer dryers Dishwashers Dryers Cooking Cooking Produced in collaboration with famous chefs, Hoover kitchen appliances utilise innovation to complement even the most inexperienced cook. Ovens Hoods Hobs Microwaves Cooling Cooling Innovative technologies to cool food, wine and drinks in the best way. Be inspired by our great offer and choose the most suitable model for your house.

Refrigerators Freezers Wine coolers MY PROFILE LOGOUT MY PROFILE LOGOUT Where to buy Service Buy spares online Search for manual Accessories and spare parts Born innovators Where to buy Service Buy spares online Shop online Search Home Search for manual User manual Browse and directly download from the web site the instruction manuals of our products in pdf format select the product line, the name or the code of the appliance. Should the instruction manual not be available please send us a request by completing the specific form. Select the product line from the drop down menu below. Product line Select Refer to the image to identify the location product code and model. Select the model of your appliance or enter the product code. Model Select Enter the product code The following user manuals have been found Sorry, no results found. Contact the Customer Service to request the user manual. Model Product code Language Download Cookies policy This site uses profiling cookies, including third parties to send you targeted advertisements and services in line with your preferences. By closing this banner, scrolling this page, clicking on a link or continuing navigation, you consent to the use of cookies. If you want to learn more or opt out to all or some cookies, click here. Get our handy Spaces are limited and assigned on a first come, first served basis. Don't forget to give us the serial number! You will still need a Null Modem Cable and If you don't know what any of this means, Also useful for mapping com ports when programming the EL6 with a USB Serial adaptor. Download the Bluetooth Assistant Manual Basic Instructions It will find all the washing machines and display them for you Click the Refresh button and it will usually clear it up. If refresh doesn't work reboot and try again. You will see this the first time you mount a machine. Click on it and allow the connection. After that you can communicate with the machine. Step by Step instructions.

<http://dev.pb-adcon.de/node/20570>

Download, print, and carry when programming! Programs created with the EL6 software can be transferred to either an EL6 control or an FM7 control. Get our handy. Enter your contact information and product of interest and we'll have one of the dealers in your area contact you. Contact us if you have any GSI related questions or concerns. This includes cookies from third party social media websites, which may track your use of our website. If you continue without changing your settings, we'll assume that you are happy to receive all cookies on our website. You can change your cookie settings at any time. Learn more AGCO has therefore updated its privacy policy to give you a better understanding of the types of personal data we collect from you and how we use it. The GSI Group, LLC, all rights reserved. GSI Group, LLC reserves the right to change designs and specifications without notice. Enter your contact information and product of interest and we'll have one of the dealers in your area contact you. Contact us if you have any GSI related questions or concerns. This includes cookies from third party social media websites, which may track your use of our website. If you continue without changing your settings, we'll assume that you are happy to receive all cookies on our website. You can change your cookie settings at any time. Learn more AGCO has therefore updated its privacy policy to give you a better understanding of the types of personal data we collect from you and how we use it. The GSI Group, LLC, all rights reserved. GSI Group, LLC reserves the right to change designs and specifications without notice. Are you sure to remove this product By continuing to browse or use this site, you are agreeing to our use of cookies. Please share your ZIP Code to find a nearby Best Buy to try out your next phone. Please share your ZIP Code to find a nearby Best Buy location Note If your phone is. If you're running the Touch Smart Care on the washer or dryer, and then open.

Sensor Dry cycles With Sensor Dry, you don't have. Ask a question or start a new topic to get help and advice from our loyal Samsung community. Or Text HELP to 62913 Please contact us via Live Chat for a faster response. Samsung pays for Premium Care during this period. I am the most impressed with the level of service that has accompanied my purchase. The most important aspect to me is service because if you buy a product without service to back it up, it's of no use to me in the middle of nowhere but I do not worry about that with the team at GT MFG. Our ranch is more than 4,000 hectares, and it was a hassle and too costly to coordinate all drying operations in one specific place. With our movable dryers we were able to dry our grain close to our harvesting sites and decrease our logistics and operations costs, as well as guarantee humidity quality conditions to our customers. We are convinced we made the best decision in buying GT Mfg. There is great advantage in buying GT dryer; prices and grain drying ratio is much better than for other dryer manufacturers. And it is very important to the dryer quickly recovering itself. We are very happy about dust, grain cleaner. The cleaner is doing a very good job. Dust and other small seed are separated very well. Also in dryers bottom dust falls out through sieve and it is very good. Please log in to save your comparison list. Or have you mislaid the operating instructions for your VZUG appliance. This page helps you find the instructions and download them as a PDF document. Can't find the operating instructions. Simply send us your request by email. If you continue browsing the site, you agree to the use of cookies on this website. See our User Agreement and Privacy Policy. If you continue browsing the site, you agree to the use of cookies on this website. See our Privacy Policy and User Agreement for details. If you wish to opt out, please close your SlideShare account. Learn more. You can change your ad preferences anytime.

Any attempt to repair a major appliance may result in injury to persons and property damage. The manufacturer or seller cannot be responsible for the interpretation of this information, nor can it assume any liability in connection with its use. ! WARNING To avoid injury to persons disconnect power before servicing this product. If electrical power is required for diagnosis or test purposes, disconnect the power immediately after performing the necessary checks. RECONNECT ALL GROUNDING DEVICES If grounding wires, screws, straps, clips, nuts, or washers used to complete

a path to ground are removed for service, they must be returned to their original position and properly fastened. Do not use any carelessly. ESD may damage or weaken the electronic control assembly. Your Safety and the safety of others is very important. We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages. This is the safety alert symbol. This symbol alerts you to potential hazards that can kill or hurt you and others. All safety messages will follow the safety alert symbol and either the word DANGER or WARNING. These words mean DANGER You can be killed or seriously injured if you don't immediately follow instructions. WARNING You can be killed or seriously injured if you don't follow instructions. Items contaminated with cooking oils may the dryer is used near children. Do not touch any electrical switches. Do not use instructions carelessly. Clear the room, building, or area of all occupants. department. CALIFORNIA SAFE DRINKING WATER AND TOXIC ENFORCEMENT ACT This act requires the governor of California to publish a list of substances known to the state to cause cancer, birth defects, or other reproductive harm and requires businesses to warn customers of potential exposure to such substances.

Gas appliances can cause minor exposure to four of these substances, namely benzene, carbon monoxide, formaldehyde, and soot, caused primarily by the incomplete combustion of natural gas or LP fuels. Properly adjusted dryers will minimize incomplete combustion. Exposure to these substances can be minimized further by properly venting the dryer to the outdoors. 5 In the event of person if you are in doubt as to whether the malfunction or breakdown, grounding will reduce the appliance is properly grounded. risk of electric shock by providing a path of least Do not modify the plug provided with the appliance. resistance for electric current. This appliance must If it will not fit the outlet, have a proper outlet be equipped with a cord having an equipment installed by a qualified electrician. grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is This appliance must be connected to a grounded properly installed and grounded in accordance with metal, permanent wiring system or an equipment all local codes and ordinances. Follow details install the dryer in humid spaces. Failure to in the installation instructions. Electric shock can follow this warning can cause serious injury, fire, result if the dryer is not properly grounded. Electric shock can result if the dryer is not properly Improper power circuit can melt, creating electric grounded. Failure to do so can exposed to the weather. Failure to do so can result in recommended in this Owner's Guide. Use only death, explosion, fire, or burns. Packaging warning can cause serious injury, fire, electric material can be dangerous for children. There is a shock, or death. If the dryer is not connection with the above recommendations, a exhausted outdoors, some fine lint and large UL listed flexible metal transition duct may be amounts of moisture will be expelled into the used between the dryer and wall connection only.

Use of plastic or other which extend into the duct that could catch lint combustible ductwork can cause a fire. Punctured and reduce the efficiency of the exhaust system. For complete otherwise restricted in use or during installation. The exhaust duct should be kept as short as possible. Make sure to clean any old ducts before installing your new dryer. Failure to follow these instructions can result in fire or death. 7 Electrical shock can result if dryer from fire and electric shock. Failure to follow these instructions can gloves and safety glasses. Failure to follow these instructions may could cause a fire hazard from overheated wires. Please note that every section of this manual provides important information regarding the preparation and use of your dryer, and it is important that you review this entire manual before proceeding with any installation or use. More detailed instructions concerning electrical connections, gas connections, and exhaust requirements are provided at other parts of this manual. STEP 1 Positioning the Dryer. Certain minimum clearances are required above, behind, and to the sides of the unit, as Choose a location with a solid floor for your dryer. Please also keep the floor for a garage installation. After placing the following instructions in mind when installing in a dryer in the desired location, please make sure that closet or recessed area it has the required clearances shown below, and Consider allowing additional clearance for sections on

Exhaust and Maintenance requirements. Wall, door and floor molding may force additional clearances. A louvered door with comparable ventilation openings is also acceptable. Note Level the dryer using the leveling legs and tighten ventilation the adjusting nuts to hold them in place. hole r. Closet door ClosetSide view If the d ryer is not level, the clothes will not tumble properly and the sensor will not be able to de tect the dryness level accurately.

Adjust the le veling legs carefully to avoid injury. Note No other fuelburning appliance shall be installed in the same closet as the drye r. This applies only to dryers suitable for installation in a closet. WARNING The applian ces are he avy. Two or more people a re requi red when moving or installing the appliance. 13 ClosetFront view There is a risk of serious back injury or other injuries. The leveling legs must remain firmly on the dryer to make sure that the dryer doe s not rock f rom co rner to co rner.floor and the dryer should not rock. The maximum If you are installing the dryer on the optionalslope of the dryer from left to right or from front to pedestal, you must use the leveling feet on theback should not exceed 2.5 cm 1 inch. If the dryer pedestal to level the dryer. The dryer leveling feetis not level, and if the slope exceeds 2.5 cm 1 inch, should be fully retracted.a load may not tumble properly and internal sensorsmay malfunction. Note Other sections of thismanual also provide important informationconcerning the placement of and clearances for yourdryer. Please review this entire manual before STEP 2 Leveling the Dryer.Turn clockwise to raise To ensure that the dryer provides optimal drying the dryer or counte rclockwise to lower it.To minimize Raise or lower the leveling feet until dryer is vibration, noise, and unwanted movement, the level from floor must be a perfectly level, solid surface.NOTE Adjust the leveling feet only as far as Make sure that all 4 leveling feet are in firm necessary to level the dryer. Extending the contact with the floo r. leveling feet more than necessary can cause the dryer to vibrate. Level Leveling Feet Position the dryer in the final location. Place a level across the top of the dryer. 14 Follow theseprocedures to reverse the direction in which yourdoor opens Note Door and l atch should be ali gned at the center when closed. O the rwise, the door will not open, close, or latch prope rly. !

15 Clean old ducts before installing this dryer Failure to follow these instructions can result in death or fire. 21. Detach and remove the knockout that matches the desired venting direction Note Right side not available on Gas Dryers V Follow steps 1, 2, and 3, as shown smaller endsfacing away from the dryer. below. Incorrect installation of the vent and imp roper taping of the joi nts will interfere with correct d ryer and vent fun ction.In addition to the following warnings, please refer tomanual section on Exhaust Requirements andMaintenance. IMPORTANT To reduce the risk of fire,combustion, and gas accumulation, the dryer must bevented to the outdoors. Please follow the instructionsand all others in this manual very carefully. 22. Reconnect the duct to the blower housing and attach the duct to the base. Do not use plastic or thin foil duct. 31. Preassemble a 4 elbow with a 4 duct. Use 4 10.2 cm diameter rigid or semirigid Wrap duct tape around joint.Clean old ducts before installing this dryer The male end of each section of exhaust duct must point away from the dryer Use as few elbow joints as possible. 32. Insert the elbow duct assembly first through Use duct tape on all duct joints the side opening and connect the elbow to Insulate ductwork that runs through unheated the internal duct.In addition to the following, Following are several warnings and instructionsplease refer to manual section on Gas Requirements concerning making the electrical connection for electricand Instructions. dryers. More detailed information concerning the electrical connection is provided at the manual section entitled Electrical Requirements for Electric Dryer. 1 It is important that you thoroughly review that section, and the remainder of this manual before taking any 2 steps to install or use this dryer. 5 3 1. Use only a new U.L. listed No. 10 copper wire only three conductor power supply cord kit rated 240 4 1. New stainless steel flexible connector.

Use this type of Volts minimum 30 Amperes and labeled as suitable connector only if allowed by local codes. Use Design AGA for use in a clothes dryer.Note Burner input requirements Adjusting

burner input setting is not needed at the dryer will not have a problem with the BTU rating. Use a new UL approved 30 amp power back of the dryer. Make sure that you don't damage the supply cord or 10 gauge solid copper wire. Use a UL approved strain relief. Connect the dryer to your laundry room's gas supply connections. Connect neutral wire white or center wire below, only use a new stainless steel flexible connector if to center terminal. Securely tighten all connections between the dryer and connected to green ground connector. Securely tighten all electrical connections room's gas supply and check all pipe connections both. See installation instructions for complete internal and external for gas leaks with a noncorrosive instructions. Refer to Part 7 page 20. Failure to do so can result in fire or electrical shock. 5. For LP Liquefied Petroleum gas connection, refer to 17 this manual's section entitled Gas Requirements and Instructions. The adequacy of the airflow can be and water, with damp clothes to remove from the measured by evaluating the static pressure. Plug in your dryer after reviewing the approximately 2 ft. 60.9 cm from the dryer. Static following parts on your dryer's Electrical pressure in the exhaust duct should not exceed 0.6 Requirements. inches 1.5 cm. The dryer should be checked with the dryer running with no load. Note If all air is not purged from the gas line, main burner have ignited. If this happens, the igniter will reattempt gas ignition after approximately two minutes. The dryer must be disconnected from the the operating instructions that accompany the dryer. Gas dryer may not be or Mobile Home. If you are 7 DO NOT connect the exhaust duct with any other uncertain whether your proposed installation will duct, vent, chimney, or other exhaust duct.

comply with these standards, please contact a 8 Make sure the dryer has adequate access to service and installation professional for assistance. The opening for outside fresh air must be at least 25 in<sup>2</sup> 163 cm<sup>2</sup>. The following instructions apply to any installation of the dryer in a manufactured or mobile home 9 It is important that the clearance of the duct from any combustible construction be at least 2 inches 5 cm, and, when venting the dryer to the 1 The gas dryer must be permanently attached to outdoors, the dryer can be installed with a the floor. More detailed 10 Please be aware that venting materials are not information concerning the electrical connection supplied with the dryer. You should obtain the is provided at the manual section entitled venting materials necessary for proper Electrical Requirements for Electric Dryer installation. 3 To reduce the risk of combustion and fire, the dryer must be vented to the outside. WARNING WARNING Do not connect exhaust ducts with Do not vent the exhaust duct under the metal screws or fasteners that extend manufactured or mobile home. Note The Coin drop assembly operates on DC12V in dryer. The Card reader assembly operates on DC12V in dryer. 20 Remove 2 screws Disassemble the top plate Remove 4 pieces 21 Connect the coin box switch when it is in place. Assemble the top plate Install the top plate on the dryer. 23 Assemble the control plate Lower Install security lock Attach the control panel with coin drop box module to the top of the bottom dryer. 27 Dryer is equipped stainless steel connector. Turn on gas and connection. Remove the shipping cap from the gas connection gas leaks with a noncorrosive leak detection fluid. Make sure you do not 5. For L.P. Liquefied Petroleum gas connection, refer damage the pipe thread when removing the cap. If over 15 ft. 4.50 m, use UL listed on the dryer. Failure to do so can result in re, No. 8 AWG wire copper wire only, or as explosion, or death.

Failure 50 Hertz, single phase circuit, fused at 30 to do so can result in re, explosion, or death. ELECTRICAL SERVICE wall receptacle and dryer terminal block FOR THE DRYER SHOULD BE OF THE IS NOT supplied with dryer. Type of pigtail MAXIMUM RATE VOLTAGE LISTED ON THE and gauge of wire must conform to local NAMEPLATE. DO NOT CONNECT DRYER TO codes and with instructions on the following 110, 115, OR 120 VOLT CIRCUIT. Heating pages. Failure to follow these instructions can elements are available for eld installation result in re, explosion, or death. Failure to follow well as all new construction after January these instructions can result in re, explosion, 1, 1996. A 4 wire connection must be used or death. Failure to do so can result in re, explosion, or death. Special Electrical Requirements for Mobile or Manufactured Homes. Please



contact a qualified electrician to check your home's wiring and fuses to ensure that your home has adequate electrical power to operate the dryer. Failure to do so can result in fire or electric shock. **Electrical Requirements for Your Dryer** Please note that the wiring diagram is provided inside the dryer control hood. The plug should be plugged into an adapter to allow additional cords to be directed into a properly grounded three-prong connector to the same outlet. This plug, in order to be electric shock. **IMPORTANT WARNING** The gas supply and service for a gas dryer must comply with all local codes and ordinances. Isolate the dryer from the gas supply piping LP gas. **Supply Line Requirements.** Your laundry room nameplate. Any disassembly requires the supply line. Follow the below guide in case of using gathering exhaust duct installed with over 2 duct. Incline the exhaust duct toward exit about an 45 degree angle when exhaust duct from dryer is connected to main exhaust duct. If you don't make perpendicular connection, airflow is disturbed. 40 Do not rinse or wash screen to remove lint. Push 1.

After one year of use, the interior and complete exhaust the lint screen firmly back into place. **Running the dryer with 2.** Before one year of use, when drying performance has a loose lint screen may cause overheating and become unsatisfactory, please examine and clean the damage to the dryer and articles being dried. Remove lint from the lint dampers. A qualified service person or company should be used as new towels. A Flexible Metal Vent Kit, available at extra cost, can be used to exhaust the dryer when it is placed in hard to reach hood and remove any lint. Following attachment of the times. The screen is likely blocked if lint falls off in two separate pieces to the dryer and the wall, the dryer the screen. In order to prevent this type of build up may be returned to its final position, after which the up, and help ensure proper operation of your two pieces themselves can be connected. Ordinarily, the dryer drum will need no care. Wipe the every six months or, if necessary, more exterior of the dryer as required, and always wipe the frequently. The lint filter can also be washed as exterior of the dryer in the event any detergent, bleach, follows or other washing products is spilled on the dryer. Clean the control panel with a damp cloth as fingers, wet both sides of the screen with hot or necessary. Warning spray prewash products may warm water. Always make sure the lint filter is clean before to remove the buildup of detergent and fabric starting a new load, because a clogged lint filter may soften. Annually remove the lint filter and attach it to the with hot water. Please note that the wiring diagram is provided inside firmly replace the lint screen in your dryer. Label all wires prior to disconnection when servicing the dryer, because wiring errors can cause serious injury to you and your dryer. 42 Wiring errors can cause improper and dangerous operation. Verify proper Operation after servicing.

<http://fscl.ru/content/ecs-a780gm-10-manual>